


PURSUIT®

2655 CENTER CONSOLE OWNER'S MANUAL

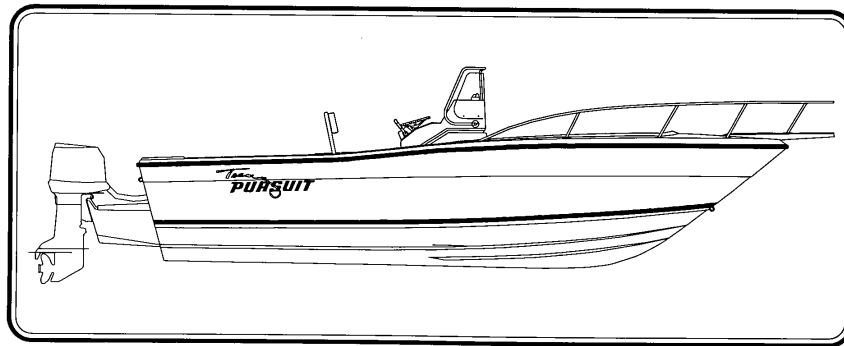

PURSUIT. FISHING BOATS
3901 St. Lucie Blvd.
Ft. Pierce, Florida 34946

Team PURSUIT. 2655 CENTER CONSOLE
Print Date 10/93

**THIS PAGE WAS LEFT BLANK
INTENTIONALLY**

IMPORTANT INFORMATION

Your **Team PURSUIT** 2655 Center Console Owner's Manual has been written to include a number of safety instructions to assure the safe operation and maintenance of your boat. These instructions are in the form of **WARNING**, **CAUTION** and **DANGER** statements. The following definitions apply:



IMMEDIATE HAZARDS WHICH WILL RESULT IN SEVERE PERSONAL INJURY OR DEATH.



HAZARDS OR UNSAFE PRACTICES WHICH COULD RESULT IN SEVERE PERSONAL INJURY OR DEATH.



HAZARDS OR UNSAFE PRACTICES WHICH COULD RESULT IN MINOR PERSONAL INJURY, OR PRODUCT AND PROPERTY DAMAGE.

All instructions given in this book are as seen from the stern looking toward the bow, with starboard being to your right, and port to your left. A glossary of boating terms is included.

IMPORTANT NOTE: Your boat uses internal combustion engines and flammable fuel. Every precaution has been taken by **Pursuit Fishing Boats** to reduce the risks associated with possible injury and damage from fire or explosion, but your own precaution and good maintenance procedures are necessary in order to enjoy safe operation of your boat.

**THIS PAGE WAS LEFT BLANK
INTENTIONALLY**

SERVICE INFORMATION

Please fill out the following information section and leave it in your 2655 Center Console Owner's Manual. This information will be important for you and Pursuit service personnel to know, if and when you may need to call Pursuit for technical assistance or service.

CUSTOMER'S NAME	
ADDRESS	
CITY	STATE ZIP
PHONE HOME: OFFICE:	
DEALER	
ADDRESS	
CITY	STATE ZIP
PHONE	
PURCHASE DATE	ENGINE MAKE
DELIVERY DATE	PORT ENGINE NUMBER
HULL NUMBER	STARBOARD ENGINE NUMBER

Pursuit Fishing Boats reserves the right to make changes and improvements in equipment, design and vendored equipment items, at any time without notification.

THIS PAGE WAS LEFT BLANK
INTENTIONALLY

TABLE OF CONTENTS

***Chapter 1:* Propulsion System**

	Page No.
1.1 General	1-1
1.2 Drive Systems	1-2
1.3 Engine Lubrication	1-3
1.4 Engine Cooling System	1-3
1.5 Propellers	1-3
1.6 Engine Instrumentation	1-4

***Chapter 2:* Helm Control Systems**

2.1 General	2-1
2.2 Engine Throttle and Shift Controls	2-1
2.3 Neutral Safety Switch	2-2
2.4 Kill Switch	2-2
2.5 Steering System	2-2
2.6 Trim Tabs	2-3
2.7 Control Systems Maintenance	2-4

***Chapter 3:* Fuel System**

3.1 General	3-1
3.2 Outboard Fuel System	3-3
3.3 Fueling Instructions	3-3
3.4 Fuel System Maintenance	3-5

***Chapter 4:* Electrical System**

4.1 General	4-1
4.2 12 Volt System	4-1
4.3 110 Volt System	4-4
4.4 Electrical System Maintenance	4-6

TABLE OF CONTENTS

Chapter 5: **Fresh Water System**

	Page No.
5.1 General	5-1
5.2 Fresh Water System Operation	5-1
5.3 Shore Water Connection	5-2
5.4 Fresh Water System Maintenance	5-2

Chapter 6: **Raw Water System**

6.1 General	6-1
6.2 High Pressure Washdown	6-2
6.3 Livewell	6-2
6.4 Raw Water System Maintenance	6-3

Chapter 7: **Drainage Systems**

7.1 Cockpit Drainage	7-1
7.2 T-Top Drainage	7-1
7.3 Bilge Drainage	7-2
7.4 Fishbox Drainage	7-2
7.5 Water System Drains	7-3
7.6 Maintenance	7-3

Chapter 8: **Ventilation System**

8.1 Head Compartment Ventilation	8-1
---	-----

TABLE OF CONTENTS

Chapter 9: **Safety Equipment**

	Page No.
9.1 Engine Alarm	9-1
9.2 Neutral Safety Switch	9-1
9.3 Kill Switch	9-1
9.4 Fire Extinguisher	9-2
9.5 Required Safety Equipment	9-2

Chapter 10: **Operation**

10.1 General	10-1
10.2 Rules of the Road	10-1
10.3 Pre-Cruise Check	10-1
10.4 Operating Your Boat	10-3
10.5 Grounding and Towing	10-5
10.6 Trailering Your Boat	10-6

Chapter 11: **Exterior Equipment**

11.1 Deck	11-1
11.2 Hull	11-2
11.3 Cockpit Equipment	11-2
11.4 Center Console	11-3

Chapter 12: **Interior Equipment**

12.1 Portable Head	12-1
12.2 Marine Head System	12-2

TABLE OF CONTENTS

Chapter 13: Routine Maintenance

	Page No.
13.1 Exterior Hull and Deck	13-1
13.2 Upholstery, Canvas and Enclosures	13-4
13.3 Cabin Interior	13-4
13.4 Bilge	13-5

Chapter 14: Seasonal Maintenance

14.1 Lay-up and Storage	14-1
14.2 Winterizing	14-3
14.3 Recommissioning	14-5

Chapter 15: Schematics

15.1 12 Volt D.C. Wiring Schematic	15-1
15.2 110 Volt Wiring Schematic	15-2
15.3 Hydraulic Steering Schematic	15-3
15.4 Fuel System Schematic	15-4
15.5 Fresh Water System Schematic	15-5
15.6 Raw Water System Schematic	15-6
15.7 Drainage System Schematic	15-7

Chapter 16: Glossary Of Terms 16-1

Chapter 1: **PROPULSION SYSTEM**

1.1 General

The Pursuit 2655 Center Console is designed to be powered with twin 2 cycle outboard motors. All outboard motors used on your 2655 use an oil injection system. Oil is automatically injected in the engines and mixed at the proper ratio from two oil tanks located in the stern of the boat.

Note: Always monitor the oil level in the tanks and only use the type of oil specified by the engine manufacturer.


Each manufacturer of the various outboard motors provides an owner's information manual with its product. It is important that you read the manual(s) very carefully and become familiar with the proper care and operation of the engine and drive system. A warranty registration card has been furnished with each new engine and can be located in the engine Owner's Manual. All information requested on this card should be filled out completely by the dealer and purchaser and then returned to the respective engine manufacturer as soon as possible.



DO NOT ATTEMPT TO SERVICE ANY ENGINE OR DRIVE COMPONENT WITHOUT BEING TOTALLY FAMILIAR WITH THE SAFE AND PROPER SERVICE PROCEDURES. CERTAIN MOVING PARTS ARE EXPOSED AND CAN BE DANGEROUS TO SOMEONE UNFAMILIAR WITH THE OPERATION AND FUNCTION OF THE EQUIPMENT.



DO NOT INHALE EXHAUST FUMES! EXHAUST CONTAINS CARBON MONOXIDE THAT IS COLORLESS AND ODORLESS. CARBON MONOXIDE IS A DANGEROUS GAS THAT IS POTENTIALLY LETHAL.

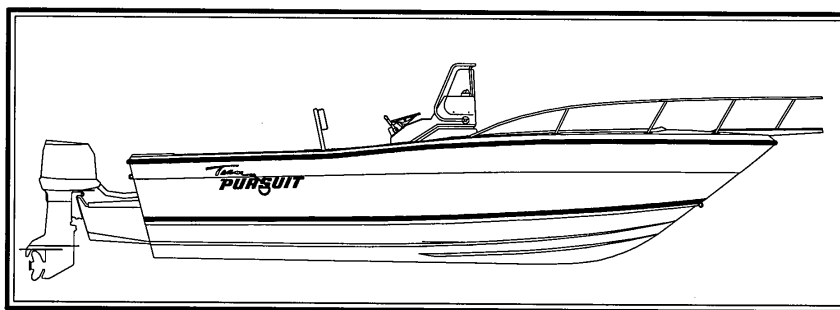

1.2 Drive Systems

Each outboard motor is a complete drive system with the gear case being just forward of the propeller and connected to the power head with a vertical drive shaft. Other than the routine maintenance outlined in the engine owner's manual, there is little to be concerned with unless the boat is to be kept in salt water for extended periods of time. Then the main concerns are marine growth and electrolysis.

Marine growth occurs when components are left in the water for extended periods and can cause poor performance or permanent damage to the exposed components. The type of growth and how quickly it occurs is relative to the water conditions in your boating area. Water temperature, pollution, current, etc. can have an effect on marine growth.

Electrolysis is the corrosion process occurring when different metals are submerged in an electrolyte. Sea water is an electrolyte and submerged engine components must be properly protected. Outboard motors are equipped with sacrificial zinc anodes to prevent electrolysis problems. The zinc anodes must be monitored and replaced as necessary. For locations and maintenance, please refer to engine owners' manual.


When leaving the boat in the water, tilt the motors as high as possible. This will decrease the risk of marine growth around the cooling inlets, propeller and exhaust ports and damage from electrolysis.



DO NOT PAINT THE OUTBOARD MOTORS WITH ANTIFOULING PAINTS DESIGNED FOR BOAT HULLS. MANY OF THESE PAINTS CAN CAUSE SEVERE DAMAGE TO THE ENGINES. CONTACT YOUR PURSUIT DEALER OR ENGINE MANUFACTURER FOR INFORMATION ON THE PROPER PAINTING PROCEDURES.

1.3 Engine Lubrication

Your outboard motors are lubricated by a variable ratio oil injection system. The oil tanks are mounted in the stern of the boat. Always monitor the oil level before each cruise by checking the gauge in the helm or visually checking the oil level using the reference marks on the tanks. When additional oil is needed, use only the type of oil specified by the engine manufacturer. Refer to the engine owner's manual for oil specifications and additional information on the oil injection system.

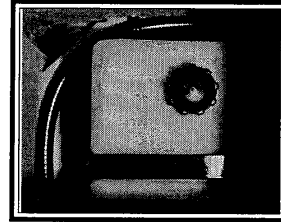

1.4 Engine Cooling System

Outboard engines are raw water (sea water) cooled. Water is pumped through the water inlets, circulated through the engine block, and relinquished with the exhaust gases through the propeller hub. The water pump uses a small impeller made of synthetic rubber. The impeller and water pump cannot run dry for more than a few seconds. In most outboard motors some cooling water is diverted through a small port below the engine cowling. This allows the operator to visually check the operation of the cooling system. When the engine is started, always check for a steady stream of water coming out of that port.



NEVER RUN AN OUTBOARD MOTOR WITHOUT WATER FLOWING TO THE WATER PUMP. SERIOUS DAMAGE TO THE WATER IMPELLER OR ENGINE COULD RESULT.

Note: If the boat is used in salt or badly polluted water the engine should be flushed after each use. Refer to the engine owner's manual for the proper engine flushing procedure.

1.5 Propellers

The propellers convert the engine's power into thrust. They come in a variety of styles, diameters and pitches. The one that will best suit the needs of your Pursuit will depend somewhat on your application and expected average load. Propeller sizes are identified by two numbers stamped on the prop in sequence. The 1st number in the sequence (example 14 x 21) is the diameter of the propeller, and the 2nd number is the pitch. Pitch is the theoretical distance traveled by the propeller in each revolution. Always repair or replace a propeller immediately if it has been damaged. A damaged and therefore out of balance propeller can cause vibration that can be felt

Team PURSUIT 2655 CENTER CONSOLE


in the boat and could damage the engine gear assembly. Refer to the engine owner's manual for information on propeller removal and installation.



RUNNING AGROUND OR STRIKING AN UNDERWATER OBSTRUCTION CAN RESULT IN SERIOUS INJURY AND DAMAGE TO THE MOTOR OR BOAT. IF YOUR BOAT RUNS AGROUND, EVALUATE THE DAMAGE THEN PROCEED AT LOW SPEED TO THE NEAREST SERVICE FACILITY AND HAVE AN IMMEDIATE INSPECTION MADE BEFORE FURTHER USE OF THE CRAFT. A DAMAGED BOAT CAN TAKE ON WATER. KEEP ALL LIFE SAVING DEVICES CLOSE AT HAND WHILE DRIVING TO A DOCK AREA. IF THE BOAT CANNOT BE IMMEDIATELY REMOVED FROM THE WATER, THOROUGHLY INSPECT THE BILGE AREA FOR LEAKS SO THAT THE BOAT DOES NOT SINK WHILE MOORED.

1.6 Engine Instrumentation

The helm station is equipped with a set of engine instruments and/or alarms. These instruments allow the pilot to monitor the engine's operational conditions. Close observation of these instruments allows the pilot to operate the engines at the most efficient level and could save the engines from serious costly damage. The instrumentation is unique to the type of outboard motors installed on your Pursuit. Some or all of the following gauges may be present.

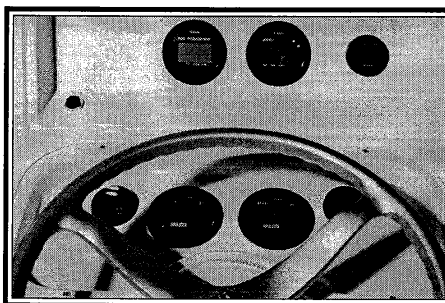

Tachometer

The tachometer displays the speed of the engine in revolutions per minute (RPM). This speed is not the boat speed or necessarily the speed of the propeller. The tachometer may not register zero with the key in the "OFF" position.



NEVER EXCEED THE MAXIMUM RECOMMENDED OPERATION RPM OF THE ENGINE. MAINTAINING MAXIMUM, OR CLOSE TO MAXIMUM RPM FOR EXTENDED PERIODS CAN REDUCE THE LIFE OF THE ENGINE.

Speedometer

The speedometer indicates the speed of the boat in miles per hour.

Temperature Gauge The temperature gauge shows the temperature of the engine cooling system. A sudden increase in the temperature could indicate an obstructed water inlet or an impeller failure.



CONTINUED OPERATION OF AN OVERHEATED ENGINE CAN RESULT IN ENGINE SEIZURE. IF AN UNUSUALLY HIGH TEMPERATURE READING OCCURS, SHUT THE ENGINE OFF IMMEDIATELY. THEN INVESTIGATE AND CORRECT THE PROBLEM.

Water Pressure Gauge

The water pressure gauge monitors the water pressure in the engine gauge cooling system. Refer to the engine manufacturer owner's manual for more information on the cooling system water pressure requirements for your engines.



DO NOT OPERATE THE ENGINES IF LOW WATER PRESSURE IS INDICATED. THIS COULD BE AN INDICATION OF A COOLING SYSTEM BLOCKAGE OR AN IMPELLER FAILURE. IF LOW WATER PRESSURE IS INDICATED, SHUT THE ENGINE OFF AND INVESTIGATE AND CORRECT THE PROBLEM.

Oil Level Gauge

The oil level gauge indicates the amount of oil in engine oil tank(s).

Fuel Gauge

The fuel gauge indicates the amount of fuel in the fuel tank.

Voltmeter

The voltmeter displays the voltage for the battery and the charging system. The normal voltage is 11 to 12 volts with the engine off and 13 to 14.5 volts with the engine(s) running.

Hour Meter

The hour meter keeps a record of the operating time for the engine.

Engine Alarms


Most outboards are equipped with an audible alarm system mounted in the helm area that monitors selected critical engine systems. The alarm will sound if one of these systems begins to fail. Refer to the engine owner's manual for information on the alarms installed with your engines.



IF THE ENGINE ALARM SOUNDS, IMMEDIATELY SHUT OFF THE ENGINE UNTIL THE PROBLEM IS FOUND AND CORRECTED.

Compass

The compass is on top of the console. To adjust the compass for your area, read the instructions on "Compass Compensation" given to you in the literature packet.

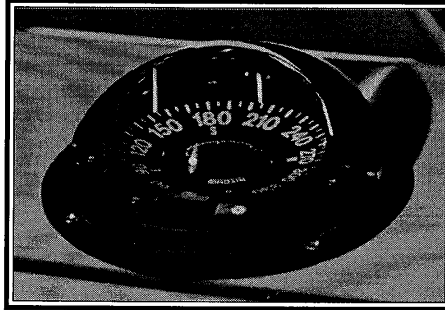

Instruments Maintenance


Electrical protection for instruments and ignition circuitry is provided by a set of circuit breakers located near the main battery switch. The ignition switches should be sprayed periodically with a contact cleaner/lubricant. The ignition switches and all instruments, controls, etc. should be protected from the weather when not in use. Excessive exposure can lead to gauge and ignition switch difficulties.

Chapter 2: **HELM CONTROL SYSTEMS**

2.1 General

The helm controls consist of three systems: the engine throttle and shift controls, the steering system, and the trim tab control switches. These systems provide the operator with the ability to control the direction and attitude of the boat from the helm station.

Each manufacturer of the control components provides an owner's manual with its product. It is important that you read the manuals and become familiar with the proper care and operation of the control systems.

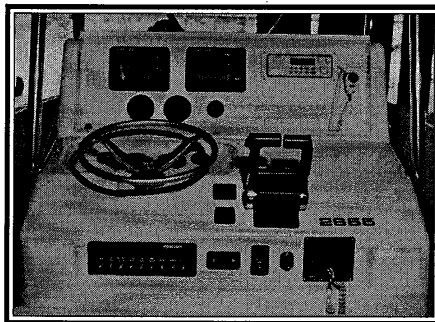


2.2 Engine Throttle and Shift Controls

The shift and throttle controls on your boat may vary depending on the engines used. The following control description is typical of most outboard remote controls. Refer to the engine or control manual for specific information on the controls installed on your Pursuit.

The engine(s) throttle and shift control systems consist of three major components: the control handles, the throttle cable, and the shift cable. The cables are all push-pull type. Two cables are required. One connects the remote throttle control to the carburetor and the other connects the remote shift control to the engine shift rod linkage.

The helm on your Pursuit is designed for a binnacle style control with a single lever for each engine that operates as a gear shift and a throttle. General operation will include a position for neutral (straight up and down), a forward position (the 1st detent forward of neutral), and a reverse position (the 1st detent aft of neutral). Advancing the control lever beyond the shift range advances the throttle in forward or reverse. Each control is equipped with a means of permitting the engine to be operated at a higher than idle RPM while in neutral for cold starting and warm-up purposes.

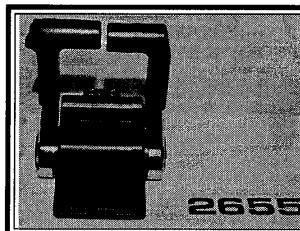


2.3 Neutral Safety Switch

Every control system has a neutral safety switch incorporated into it. This device prohibits the engine from being started while the shift lever is in any position other than the neutral position. If the engine will not start, slight movement of the shift lever may be necessary to locate the neutral position and disengage the safety cutout switch. Control or cable adjustments may be required to correct this condition should it persist. See your Pursuit dealer for necessary control and cable adjustments.


2.4 Kill Switch

All Pursuit boats rigged with outboard motors are equipped with a kill switch and lanyard. When the lanyard is pulled it will engage the switch and shut off the engine(s). We strongly recommend that the lanyard be attached to the driver whenever the engine is running.

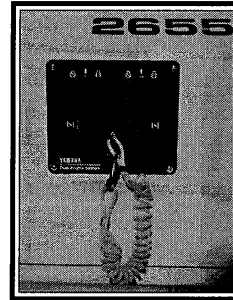

2.5 Steering System

The steering system is hydraulic and made of two main components: the helm assembly and the hydraulic cylinder. The helm unit acts as both a fluid reservoir and pump. Turning of the helm, or steering wheel, pumps the fluid in the hydraulic hoses and activates the hydraulic cylinder causing the motors to turn. A slight clicking sound may be heard as the wheel is turned. This sound is the opening and closing of valves in the helm unit and is normal.

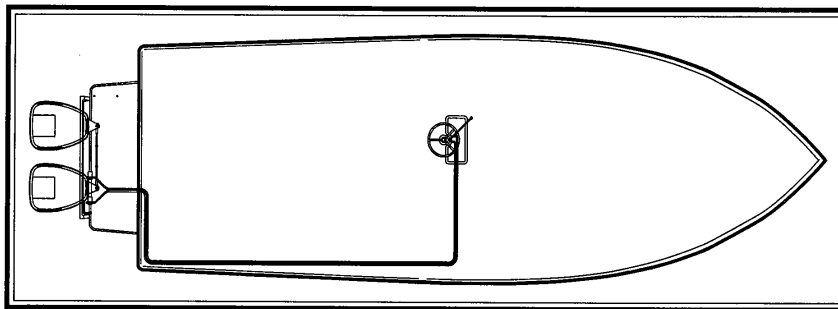


2655 Center Console Hydraulic Steering System
(For expanded drawing, see Chapter 15.)

2.6 Trim Tabs

Pursuit uses a dual rocker switch to control the trim tabs. The switch is labeled and controls bow up and down movements. It also controls starboard and port up and down movements. Bow up and bow down will control the hull planing attitude while port and starboard up and down provides control for the hull listing.

Before leaving the dock, make sure that the tabs are in the full UP position by holding the control in the bow up position for ten (10) seconds.

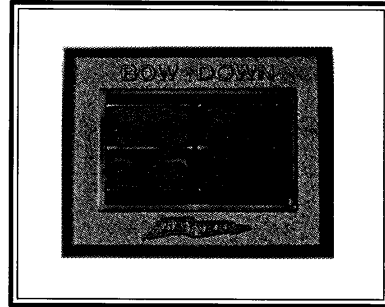

Always establish the intended heading and cruise speed before attempting to adjust the hull attitude with the trim tabs. After stabilizing speed and direction, move the trim tabs to achieve a level side to side running attitude being careful not to over trim.

After depressing a trim tab switch, always wait a few seconds for the change in trim plane to take effect. **Avoid depressing the switch while awaiting the trim plane reaction.** By the time the effect is noticeable the trim tab plane will have moved too far and thus overcompensate.

When running at a speed that will result in the boat falling off plane, lowering the tabs slightly, bow down, will improve the running angle and operating efficiency. Too much bow down tabs can reduce operating efficiency and cause substantial steering and handling difficulties.

Be extremely careful when operating in a following sea. The effect of trim tabs is amplified under such conditions. Steering and handling difficulties can result from improper trim tab usage, particularly in a following sea. Always raise the tabs to the full bow up position in these conditions.

When running at high speeds be sure that the tabs are in the full UP position. Only enough trim plane action should be used to compensate for any listing. Trim tabs are extremely sensitive at high speeds. Adjust for this and be prepared to slow down if difficulties arise.

When running into a chop, a slight bow down attitude will improve the ride. Be careful not to over trim. Handling difficulties may result.

2.7 Control Systems Maintenance

Control Maintenance

Periodic inspection of the control systems and all connections should be made. Signs of rust, corrosion, wear, or other deterioration should immediately be serviced. Generally, periodic lubrication of all moving parts and connections with a light waterproof grease is in order.

Lubrication should be performed as often as necessary to keep the system operating smoothly.

Control system adjustments may become necessary. If adjustments become necessary, see your Pursuit dealer.



DO NOT ATTEMPT CONTROL ADJUSTMENTS UNLESS YOU ARE FAMILIAR WITH SERVICING CONTROL SYSTEM PROCEDURES. CONTROL MISADJUSTMENT CAN CAUSE LOSS OF CONTROL AND SEVERE ENGINE OR LOWER UNIT DAMAGE.

Steering System Maintenance

A periodic inspection of all steering hoses, linkage and helm assemblies should be made. Signs of corrosion, cracking, loosening of fastenings, excessive wear, or deterioration should be immediately corrected. Failure to do so could lead to steering system failure that would result in loss of control.

When new, or after repairs, hydraulic steering systems may need to have all air purged from the system. Review the information provided by the hydraulic steering manufacturer for proper specifications and details on system service and maintenance.

Trim Tab Maintenance

Marine growth can interfere with the proper operation of the trim tab planes and actuators. Periodically inspect and clean marine growth from the actuators and planes.

The trim tab fluid should be checked often. Keep the fluid level between the marks on the trim tab pump reservoir.


If your Pursuit will be left in salt water for extended periods, it may be necessary to install zinc anodes on the trim tab planes to prevent galvanic corrosion. Refer to the trim tab owner's manual for additional maintenance information and fluid specifications.

Chapter 3: **FUEL SYSTEM**

3.1 GENERAL

The gasoline fuel system used in Pursuit boats is designed to meet or exceed the requirements of the U.S. Coast Guard, the Boating Industry Association, and The American Boat and Yacht Council in effect at the time of manufacture.

All gasoline fuel systems have been factory inspected and pressure tested in accordance with regulations in effect at the time of manufacture. This inspection assures that the system is air tight, leak proof and safe. It is the responsibility of the purchaser to maintain it in that condition. Make frequent inspections to assure that no deterioration or loosening of connections is resulting from vibration.

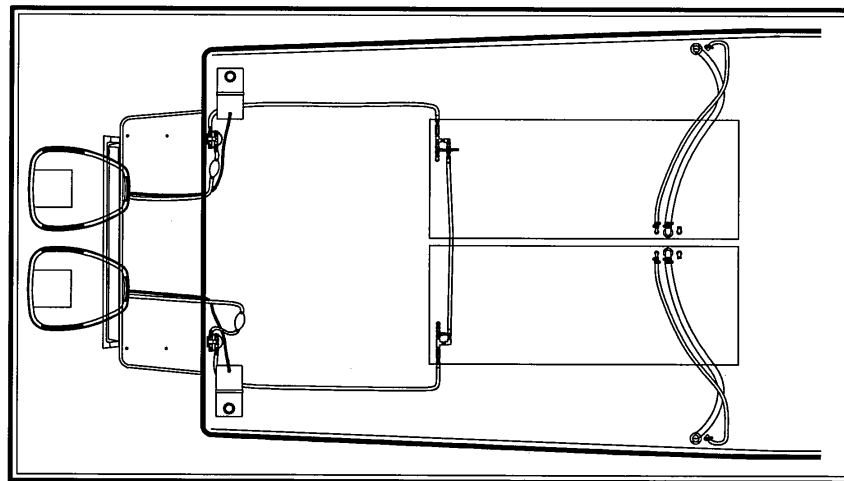

2655 Center Console Fuel System
(For expanded drawing, see Chapter 15.)



DO NOT LET THE ODOR OF GASOLINE GO UNCHECKED. ANY ODOR OF GASOLINE MUST BE IMMEDIATELY INVESTIGATED AND STEPTAKEN TO PROTECT THE BOAT AND ITS OCCUPANTS UNTIL THE PROBLEM IS CORRECTED. IF THE ODOR OF GASOLINE IS NOTED, SHUT OFF ALL ENGINES AND ELECTRICAL EQUIPMENT, INVESTIGATE AND CORRECT THE SITUATION IMMEDIATELY. HAVE ALL PASSENGERS PUT ON PERSONAL FLOTATION DEVICES AND KEEP FIRE EXTINGUISHER READY UNTIL THE SITUATION IS RESOLVED.

Fuel Withdrawal Tubes

The fuel withdrawal tubes are positioned in the fuel tanks to achieve optimum fuel usage, fuel line routing, etc. At certain speeds and hull trim angles, the fuel supply at the withdrawal tank location can increase or decrease accordingly. Be extremely careful when attempting to operate the boat when low on fuel. Though some fuel may be in the tank, the relative trim angle of the boat may cause the fuel to flow away from the withdrawal.

Fuel Gauge


This indicates the amount of fuel in the tank. Due to the mechanical nature of the fuel sender, variations in readings during various speeds of operation may occur. This system is merely a relative indication of the available fuel supply and not a calibrated instrument.

Fuel Fills

Fuel deck plates are located on both side decks, and are marked GAS. Be sure to use the proper type and grade fuel. Refer to the engine owner's manual for additional information.



DO NOT CONFUSE FUEL DECK FILL PLATE WITH WATER OR WASTE DECK PLATES. THESE PLATES ARE ALSO LABELED ACCORDINGLY.

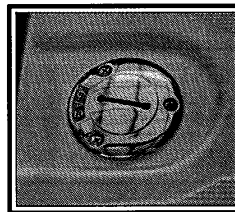

Fuel Vents

There are two fuel vent fittings, one on each side of the hull. While the tank is being filled, the air displaced by the fuel escapes through the vent. When the tank is almost full, fuel will be ejected from the fuel vent.

After fueling, replace the fill cap(s), and wash the areas around the fuel fill plate and below the fuel vent(s). Residual fuel left on the deck and hull sides can be dangerous, and will yellow the fiberglass or damage the striping.

3.2 Outboard Fuel System

The fuel system on the Pursuit 2655 has two fuel tanks and three manual fuel valves, one on-off valve for each tank fuel line and one on-off valve for the bypass line. The valves are off when the handle is perpendicular to the fuel flow. The bypass line and valve allow the operator to run both engines from both tanks or both engines from either the starboard or port tank.



During normal operation, the port engine should be supplied fuel from the port tank and the starboard engine supplied fuel from the starboard tank. The bypass valve should be off and used only in case of a fuel supply problem in one of the tanks.

Fuel withdrawal lines are equipped with anti-syphon valves where the lines attach to the fuel tanks. These valves prevent gasoline from syphoning out of the fuel tank should a line rupture.



DO NOT REMOVE THE ANTI-SYPHON VALVE(S) FROM THE SYSTEM. SHOULD THE VALVE(S) BECOME CLOGGED, CLEAN AND RE-INSTALL OR REPLACE.

Fuel filters are installed in the transom area of the boat. The filters are the water separator type and there is one filter for each engine fuel line. Each fuel filter has a sediment bowl that should be checked for water frequently to assure an adequate supply of clean, dry fuel to the engines. It is recommended that the filters are inspected periodically and the elements changed as needed.

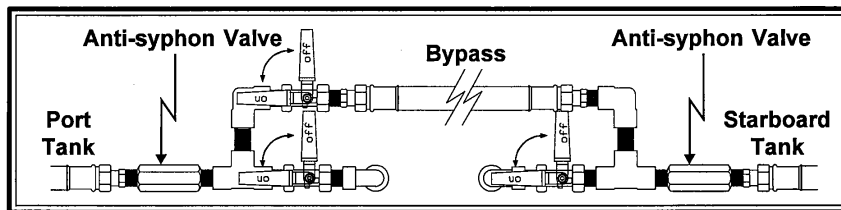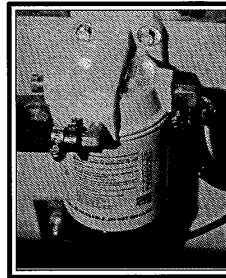

3.3 Fueling Instructions



FUEL IS VERY FLAMMABLE. BE CAREFUL WHEN FILLING THE FUEL TANKS. NO SMOKING. NEVER FILL THE TANKS WHILE THE ENGINES, MOTORS AND FANS ARE RUNNING. FILL THE FUEL TANKS IN AN OPEN AREA. DO NOT FILL THE TANKS NEAR OPEN FLAMES.



TO PREVENT DAMAGE TO THE FUEL SYSTEM, USE ONLY A GOOD GRADE OF LEAD-FREE OR LEADED GASOLINE FOR GASOLINE ENGINES. DO NOT USE A FUEL THAT CONTAINS HARSH ADDITIVES OR IS AN ALCOHOL BLEND. ANY DAMAGE DONE TO THE FUEL SYSTEM THAT IS THE RESULT OF USE OF AN ALCOHOL BLEND, IS NOT COVERED BY THE PURSUIT WARRANTY. REFER TO THE ENGINE MANUFACTURE OWNER'S MANUAL FOR THE FUEL REQUIREMENTS FOR YOUR ENGINES.

To fill the fuel tank at a marina, follow this procedure:

1. Make sure all switches are in the "Off" position.
2. Make sure the boat is securely moored.
3. Make sure all passengers leave the boat.
4. Estimate how much fuel is needed.

Note: When the fuel tank is full, fuel will come out through the fuel vents. The fuel vents are located on each side of the boat.

5. A special key to open the fuel caps is supplied.
6. Turn the key counterclockwise to open the cap.
7. Remove the cap.
8. Put the nozzle in the fuel opening.



TO PREVENT STATIC SPARKS WHEN FILLING THE TANK, MAKE SURE THE NOZZLE IS IN CONTACT WITH THE FUEL OPENING.



MAKE SURE YOU DO NOT SPILL ANY FUEL. IF FUEL IS SPILLED, USE A CLOTH TO REMOVE THE FUEL.

9. Fill the fuel tank.
10. Remove the nozzle.

11. Install the fuel cap.
12. Check the fuel compartment and below the deck for fuel odors. If you smell fuel, do not start the engine.



TO REDUCE THE RISK OF A FIRE AND/OR EXPLOSION, DO NOT START THE ENGINE(S) WHEN FUEL FUMES ARE PRESENT. FUEL FUMES ARE DANGEROUS AND HARMFUL TO YOUR HEALTH.



MAKE SURE ALL GASOLINE ODORS ARE INVESTIGATED IMMEDIATELY.

3.4 Fuel System Maintenance

Periodically inspect all primer bulbs, connections, clamps and hoses for leakage and damage or deterioration. Replace as necessary. Spray the valves, fuel gauge and ground connections with a protector.

Periodically, remove the small screens from the fuel vent(s), clean the vents and screens of any dirt, etc. Be sure the screens are replaced securely after cleaning. The screens will prevent insects and other foreign matter from contaminating the fuel and fuel system.

Contaminated fuel may cause serious damage to your engines. The filters must be checked for water and other contamination frequently. Water is drained from the filters by placing a cup under the filter and draining through the petcock at the bottom of the filter until clean fuel flows. Each filter contains an element that must be changed at least once a season or more frequently depending on the quality of the fuel.



DO NOT DRAIN ANY FUEL IN THE BILGE. THIS COULD LEAD TO A FIRE OR EXPLOSION.



AFTER THE FILTERS' ELEMENTS HAVE BEEN CHANGED, PRIME THE FUEL SYSTEM AND CHECK ALL FITTINGS FOR LEAKS BEFORE AND AFTER STARTING THE ENGINES.

Chapter 4: **ELECTRICAL SYSTEM**

4.1 General

Your Pursuit is equipped with a 12 volt D.C. Electrical System and could be equipped an optional 110 volt A.C. System. The A.C. system draws current from shore power outlets at dockside. The D.C. system draws current from two (2) on board batteries.

The 12 volt batteries in your boat are the lead-acid type. They will require similar maintenance as those found in automobiles.

There are electrical schematics included in this manual to aid in following an individual circuit of the boat.

4.2 12 Volt System

The 12 volt system is a fairly standard system. There are two (2) batteries, one for the starboard engine and one for the port engine. The batteries are controlled by (2) battery selector switches. The batteries themselves can be charged by either engine separately, both engines simultaneously, or by the optional battery charger when hooked to shore power. All 12 volt power is distributed to the 12 volt accessories through individual circuit breakers located in the 12 volt switch panels. A main in line fuse or circuit breaker located near the battery selector switch protects the system from an overload. Another in line fuse or circuit breaker located near the selector switch protects the circuit for the automatic float switch for the bilge pump. Most 12 volt accessories are operated directly by switches in the helm and accessory switch panels.



PROPER FUSE OR BREAKER PROTECTION MUST BE PROVIDED FOR ALL 12 VOLT EQUIPMENT ADDED. DO NOT OVERLOAD THE ACCESSORY CIRCUIT BREAKERS OR OTHER CIRCUITRY THROUGH ADDITIONAL 12 VOLT EQUIPMENT.

Battery Selector Switches


There are two (2) battery selector switches located in the transom area of the boat. The starboard switch feeds the starboard engine and the 12 volt accessory panel and the port switch feeds the port engine. 12 volt power can be supplied by either battery #1 or battery #2 separately or by both batteries simultaneously. The selector switches also direct the charging current when the engines are operating.

For example: When both selector switches are on battery #1, both engines and the 12 volt panel will be powered by battery #1. Battery #2 will be isolated and in reserve. Battery #1 will be charged by both alternators. When both selector switches are on battery #2, both engines and the 12 volt panel will be operated by battery #2. Battery #1 will now be isolated and in reserve. Battery #2 will then be charged by both alternators.



When both selector switches are on "ALL," the batteries are connected in parallel. Thus, both batteries are used by both engines and all 12 volt equipment.

The "ALL" or "BOTH" positions should only be used when starting the engine, as this requires extra electrical power, or in case of a charging system malfunction on one engine. Otherwise, it is recommended that the port selector switch be set on #1 and the starboard switch be on #2 when the engines are operating. When in port, or at anchor, the port switch should be OFF and the starboard switch should be on either the battery #1 or the battery #2 position. This will keep one battery in reserve for starting the engines. Both switches should be in the "Off" position when leaving the boat unattended.

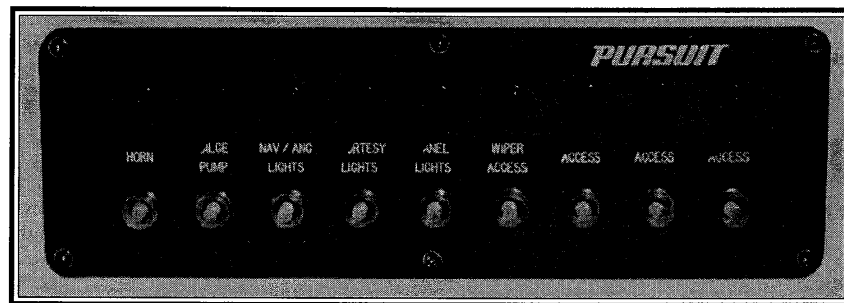

12 Volt Accessory Switch Panels

The main accessory switch panel is located at the helm. The circuit breakers that protect the accessories are located directly under the switches.

The following is a description of the accessories controlled by the main accessory switch panel:

Horn: Activates the boat horn. It is protected by a 10-amp breaker.

Bilge Pump: The bilge pump is installed in the rear center of the bilge. The pump moves water out through the thru-hull fittings in the transom. To start the pump manually, put the switch in the "On" position. It is protected by a 10-amp breaker.

Note: The bilge pump will start automatically when there is sufficient water in the bilge to activate the float switch. The float switch is protected by a 10-amp in line fuse or circuit breaker located near the battery selector switch and is always supplied current when the batteries are connected.

Anchor-Nav Lights The switch is a three-position switch. The middle position is OFF. Moving the switch in one direction will activate the navigation lights. Moving the switch in the opposite direction activates the anchor light. It is protected by a 5-amp breaker.

Courtesy Lights Activates the lights that illuminate the cockpit area. It is protected by a 5-amp breaker.

Panel Lights Activates the engine gauge and compass lights. It is protected by a 5-amp breaker.

Windshield Wiper Activates the windshield wiper if this option is installed on your boat. If no wiper is installed, this switch is reserved for additional accessories. It is protected by a 10-amp breaker.

Accessory Switches (3) These switches are supplied to protect additional equipment that may or may not have been installed by Pursuit or your Pursuit dealer. If no accessories are activated by these switches, they remain wired in the panel in reserve. Some accessories that may be connected to the accessory switches are: The fresh water pump, T-Top lights, spreader lights, fishbox pump out or electronics. They are protected by 15-amp breakers.

Additional Switch Panels

Additional Switch panels are located in various locations in the cockpit and helm area of the boat. Most of these panels are equipped with one switch and one circuit breaker. The following is a description of additional panels that may be on your Pursuit and the accessories they control:

Baitwell Switch Located under the gunwale in the stern of the cockpit. This switch activates the baitwell circulating pump that supplies water to the baitwell. It is protected by a 15-amp breaker.

Note: An additional **Baitwell Switch Panel** may be installed in the console of the Pursuit 2655 Center Console to control the center baitwell if this option is installed. It will also be protected by a 15-amp breaker.

Washdown Pump

Located under the gunwale in the stern of the cockpit. This switch activates the raw water washdown pump. The pump is the pressure demand type and is protected by a 15-amp breaker.

Note:

Please refer to Chapter 6 for more information on the baitwell and washdown systems.

Trim Tab Switch

Located in the helm. This switch controls the trim tab planes located on the transom of the boat. It is protected by a 20-amp in line fuse located behind the helm at the back of the switch. Please refer to Chapter 2 for detailed information on the operation of the trim tab controls.

Fuel Gauge Switch

The fuel gauge switch panel is located at the helm and allows one fuel gauge to be used for both fuel tanks. With the ignition switch on, move the switch to port and the gauge will show the fuel level in the port fuel tank. Move the switch to starboard and the gauge will show the fuel level in the starboard tank.

4.3 110 Volt System (Optional)

The 110 Volt A.C. System is fed by the shore power outlet. 110 volt current is distributed to the 110 volt accessories through individual circuit breakers located in the 110 volt panel. The main breaker in the panel protects the system from an overload and the reverse polarity light indicates any problems due to an improper shore power supply. All A.C. outlets in the cabin are protected by ground fault interrupts to protect against electrical shock. The 110 Volt A.C. System is wired totally separate from the 12 Volt D.C. System. A cord set is provided to supply power from the shore power outlet to the boat's 110 Volt A.C. System.



TO REDUCE THE RISK OF ELECTRICAL SHOCK IN WET WEATHER, AVOID MAKING CONTACT WITH THE SHORE CABLE OR MAKING A CONNECTION TO A LIVE SHORE OUTLET.



TO REDUCE THE POSSIBILITY OF AN ELECTRICAL SHOCK, IT IS IMPORTANT THAT THE 110 VOLT A.C. GROUND SYSTEM IS FUNCTIONING PROPERLY AND THAT A PROPER CONNECTION EXISTS BETWEEN THE SHORE POWER CORD AND THE SHORE POWER INLET AND THE OUTLET GROUND CIRCUITS. IF THERE IS ANY DOUBT ABOUT THE INTEGRITY OF THE GROUND CIRCUIT, A QUALIFIED MARINE ELECTRICIAN SHOULD BE CONTACTED IMMEDIATELY AND THE 110 VOLT A.C. SHOULD BE DISCONNECTED UNTIL THE NECESSARY REPAIRS ARE COMPLETED.

Recommended procedure for making a shore connection:

Turn the A.C. main breaker to the OFF position. If the dockside outlet includes a disconnect switch, turn it to the OFF position also.

To avoid strain on the cable make sure it has more slack than the mooring lines. Dress the cable so that it cannot be damaged by chafing between the boat and the dock. Make sure the cable does not come in contact with the water. Then connect the cable in the plug outlet making sure the connection plug includes a three-prong plug with a ground wire. Tighten the lock rings on both the shore and the boat connector plugs.

Turn the shore disconnect switch to the ON position and check for proper polarity. If reverse polarity has been achieved, the red polarity indicator in the 110 volt panel will light. If this should happen, make sure the main breaker on the panel is in the OFF position and the dock power switch is OFF. Notify a qualified electrician to check the wiring at the dock outlet. If the green light illuminates when power is supplied to the panel, the polarity is correct and the A.C. main switch can be moved to the ON position.



DO NOT ATTEMPT TO CORRECT THE WIRING YOURSELF. ELECTRIC SHOCK CAN CAUSE SEVERE INJURY OR EVEN DEATH. ALWAYS HAVE A QUALIFIED ELECTRICIAN CHECK WIRING.

Disconnecting procedure for shore power connection:

Turn the main breaker on the 110 volt A.C. panel to the OFF position.

Turn the disconnect switch on the dockside outlet to the OFF position.

Disconnect the cable from the dockside outlet and replace the outlet caps. Disconnect the cable from the boat and replace the outlet cap. Store cable.

110 Volt A.C. Panel and Accessory Operation:

The A.C. panel is located in the head compartment. The following is a description of the A.C. panel equipment and the breakers that protect the accessories:

A.C. Main Breaker

Protects the general distribution network. This breaker is very sensitive. The resulting power surge that occurs when connecting the dockside cord may cause the main breaker to trip. To avoid this surge, always turn the main breaker to the OFF position before plugging or unplugging the shore power cord.

Polarity Lights

The green light indicates proper polarity and will be lit whenever 110 volt A.C. power is supplied to the panel. The red light indicates reverse polarity current supplied to the panel. This situation will cause the red light to remain lit. If reverse polarity is achieved, immediately turn off all 110 breakers and dockside outlet breakers and notify a qualified electrician to check the dockside wiring.

Battery Charger

Supplies electrical current directly to the automatic battery charger. The battery charger automatically charges and maintains the 12 volt batteries simultaneously when activated. See the battery charger manual for more information.

Outlets

Supplies electrical current to the port side cabin electrical outlets.

Note:

All A.C. electrical outlets are provided with ground fault interrupts to protect against electric shock. These outlets should be tested periodically to insure proper operation.


Accessory

Reserved for additional equipment.

Additional A.C. Breakers Installed in your Pursuit:

Shore Power Outlet Breaker

Located in the stern of the boat near the shore power outlet plug. This breaker protects the A.C. circuit between the shore power outlet plug main A.C. panel.

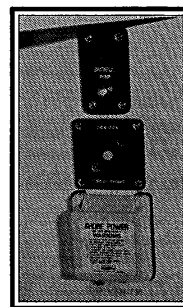

4.4 Electrical System Maintenance

D.C. Electrical System Maintenance

At least once a year, spray all exposed electrical components behind the helm and in the plugs, with with a protector. Exterior light fixture bulbs should be removed and the metal contact areas coated with a non water soluble lubricant like Vaseline. The sockets should be sprayed with a protector. Care must be taken not to get any oil or grease on the glass portion of the bulbs as this will cause the bulb to overheat and burn out.



WHEN REPLACING LIGHT BULBS IN MARINE LIGHT FIXTURES, ALWAYS USE A BULB WITH THE SAME RATING AS THE ORIGINAL. USING A DIFFERENT BULB COULD CAUSE THE FIXTURE TO OVERHEAT AND MELT OR SHORT CIRCUIT.

Inspect all wiring for proper support, sound insulation, and tight terminals, paying particular attention to portable appliance cords and plugs.

Check all below deck wiring to be sure it is properly supported, that the insulation is sound, and that there are no loose or corroded terminals. Corroded terminals should be thoroughly cleaned with sandpaper, or replaced, tightened securely and sprayed with CRC or a similar protector. Inspect all engine wiring.

110 Volt A.C. System Maintenance

Periodically inspect all wiring for nicks, chafing, brittleness, improper support, etc. Examine the shore power cord closely for cracks in the insulation and corrosion in electrical connectors. Spraying receptacles and electrical connections with an electrical contact cleaner or CRC, WD40 or similar protector will reduce corrosion and improve electrical continuity.




DO NOT ALLOW CORROSION TO BUILD ON CONNECTIONS. SHORTS OR GROUND FAULTS CAN RESULT.

The entire 110 volt circuitry, especially the shore power cord, should be seasonally tested for proper continuity by an experienced electrician. This will detect any shorts, open wires, or ground faults. The polarity indicator system should also be inspected for proper operation.

Chapter 5: FRESH WATER SYSTEM

5.1 General

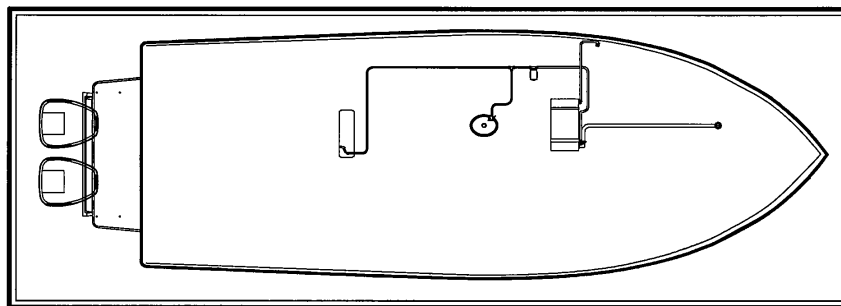

2655 Center Console Fresh Water System
(For expanded drawing, see Chapter 15.)

The Fresh Water System consists of potable water tank, distribution lines and a distribution pump. The tank is filled through a labeled deck plate located on the gunnel.



DO NOT FILL SYSTEM WITH ANYTHING OTHER THAN WATER. SHOULD THE SYSTEM BECOME CONTAMINATED WITH FUEL OR OTHER TOXIC FLUIDS, COMPONENT REPLACEMENT MAY BE NECESSARY.

5.2 Fresh Water System Operation

Fill the water supply tank slowly through the labeled deck plate.

After filling the water tank, partially open all faucets. The fresh water switch on the 12 volt panel should be on. Allow the pump to run until all of the air is purged from the system and a steady stream of water is flowing from each outlet. Next, turn off the faucets one by one. As the pressure builds the pump will automatically shut off.

When properly primed and activated the water system will operate much like the water system in a home. An automatic pressure sensor keeps the system pressurized. If the system has been recently filled or has not been used for an extended period, air bubbles may accumulate at the pump and the system may have to be reprimed.

Whenever the boat is left unattended, the fresh water pump switch should be placed in the OFF position.



DO NOT ALLOW THE FRESH WATER PUMP TO RUN DRY. THIS CAN RESULT IN DAMAGE TO THE PUMP.

5.3 Shore Water Connection (Optional)

This convenience allows the direct connection of the water system to a shoreside water supply. This provides the system with a constant supply of fresh water and minimizes the pressure pump operation.

A female inlet fitting is mounted in the cockpit. A pressure reducer is installed in the system along with two check valves. One check valve keeps water from running out of the shore water inlet fitting when the pressure pump operates. The second provides protection for the pressure pump when the shore power is connected.

To use shore water, connect a hose from the shore water faucet to the shore water fitting on the boat. Next, turn on the shore water. The pressure pump will not run and the water in the boat's water tank(s) will not be used.

NOTE: The water tank will not be filled by connecting to shore water.



DO NOT MODIFY OR CHANGE THE SHORE WATER INLET CONNECTOR WITH ANOTHER TYPE WITHOUT CONSULTING PURSUIT CUSTOMER SERVICE OR YOUR DEALER. THE USE OF THE WRONG TYPE OF INLET CONNECTOR CAN DAMAGE THE FRESH WATER SYSTEM.

5.4 Fresh Water System Maintenance

Information supplied with water system components, by the equipment manufacturers, is included with this manual. Refer to this information for additional operation and service data.

The following items should be done routinely to maintain your Fresh Water System:

Remove and clean the screens in the water tank vent fitting of any dirt, plastic particles, etc. Always replace the screens after cleaning.

Remove the filter screens from the faucet spouts and eliminate any accumulation of debris. A build up of debris can cause the pump to cycle excessively.

Periodically spray the pumps and metal components with a metal protector.

The batteries must be properly maintained and charged. Operating the pressure pump from a battery with a low charge could lead to pump failure.


Add a commercially available potable water conditioner to the water tank(s) to keep them fresh.



THE BATTERIES MUST BE PROPERLY CHARGED. OPERATING THE FRESH WATER PUMP FROM A BATTERY WITH A LOW CHARGE MAY LEAD TO A PUMP FAILURE.

Chapter 6: **RAW WATER SYSTEM**

6.1 General

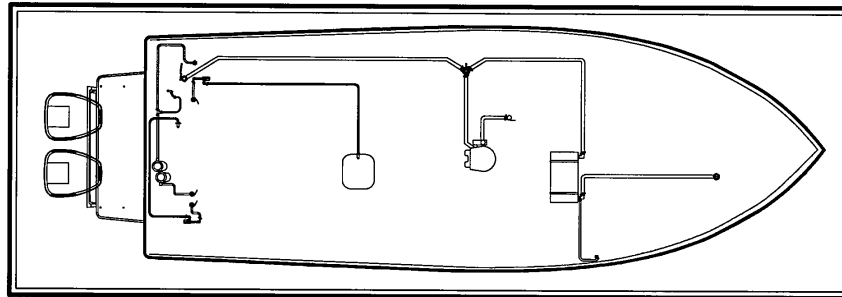

2655 Center Console Raw Water System
(For expanded drawing, see Chapter 15.)

In the Raw or Sea Water Systems, all water pumps are supplied by a single hose connected to a ball valve located in the bilge compartment. Always make sure the ball valves are open before attempting to operate any component of the Raw Water System.

12 volt pumps supply sea water to the various accessories.

Priming the System


Make sure the ball valves are open. Open the hose connector for the raw water washdown and activate the pressure pump by turning the washdown pump switch to the ON position. Run the pump until all of the air is purged from the system and then turn the switch off. Open the valve in the livewell and turn the livewell switch to the ON position. Run the pump until all of the air is purged from the system and then turn the switch to the OFF position. If the livewell pump runs but does not prime, it may have an air lock at the pump. Running the boat at 10 miles per hour or above will force water through the pump removing the air lock and allowing the pump to prime.

Note: It may be necessary to reprime the raw water system if the system is not used for an extended period and at the time of launching.

6.2 High Pressure Washdown

A 12 volt high pressure pump, controlled by a pressure sensor, supplies the raw water hose connector located in the cockpit. The pump is activated by the washdown switch located in the helm or the rear of the cockpit. This switch should be turned to the ON position just before using the washdown and be turned to the OFF position when the washdown is not in use.

When activated, the pressure switch will automatically control the pump. As the pressure builds in the washdown hose, the pump will shut off. When the washdown hose is in use and the pressure drops, the pump will turn on.

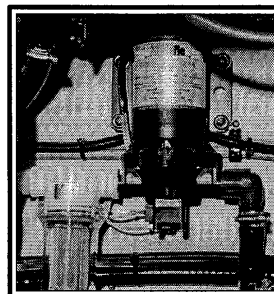

The raw water washdown system is equipped with a sea strainer located on the intake side of the pump. This should be checked frequently and cleaned as necessary.

The Washdown Pump Connection


The washdown pump hose connection is located in the cockpit and uses a standard garden hose connection.



ALWAYS TURN THE RAW WATER PUMP SWITCH TO THE OFF POSITION WHEN LEAVING THE BOAT UNATTENDED.



DO NOT RUN THE HIGH PRESSURE PUMP DRY FOR EXTENDED PERIODS AS DAMAGE TO THE PUMP WILL RESULT.

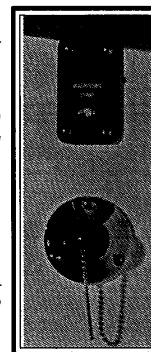

6.3 Livewell

Sea water is provided to the livewell by a 12 volt circulation pump. This pump is designed to carry a constant flow of water to the livewell. The pump does not have a pressure sensor. It is activated by the baitwell switch in the 12 volt panel or a separate switch in the stern of the cockpit. The flow of water can be regulated by the valve in the livewell. Care must be taken not to close the valve to the point that it severely restricts the water flow. A severely restricted water flow can cause damage to the livewell pump. Always turn the pump OFF at the switch panel when the livewell is not in use. An overflow built into the livewell automatically controls the water level in the livewell.

The livewell raw water intake is equipped with a scoop that will supply water to the livewell if the pump should fail. To supply water to the livewell using the scoop, make sure the thru hull and livewell valves are open and run the boat at a speed above 10 miles per hour. Water will circulate through the livewell and out the overflow.

The livewell thru hull ball valve should be closed whenever the livewell is not in use. This will prevent water from entering the livewell while the boat is cruising.

6.4 Raw Water System Maintenance

The following items should be done routinely to help maintain your Raw Water System:

Check hoses, particularly the sea water supply line, for signs of deterioration.

Remove and clean the sea water strainers.

Spray pumps with a protective oil periodically.



SHOULD A HOSE RUPTURE, TURN THE PUMP OFF IMMEDIATELY. ALWAYS CLOSE THE THRU HULL VALVE WHEN PERFORMING MAINTENANCE ON A SEA WATER PUMP.




THE BATTERIES MUST BE PROPERLY CHARGED. OPERATING ANY PUMPS FROM A BATTERY WITH A LOW CHARGE MAY LEAD TO A PUMP FAILURE.



THE RAW WATER SYSTEM MUST BE PROPERLY WINTERIZED PRIOR TO WINTER LAY-UP. SEE SECTION ON WINTERIZING.

Chapter 7: DRAINAGE SYSTEMS

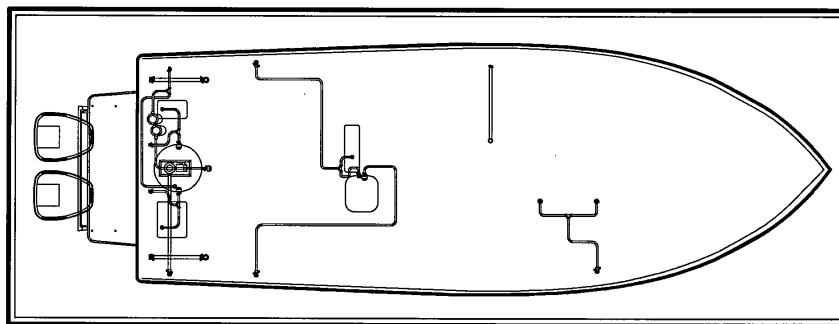

2655 Center Console Drainage System
(For expanded drawing, see Chapter 15.)

7.1 Cockpit Drainage

Your Pursuit has two scupper drains located on each side of the hull, near the waterline, to provide drainage for the cockpit. Water is channeled away from all hatches by a gutter or drain rail system. The water then drains overboard through the scuppers.

7.2 T-Top Drainage (Optional)


There is a hole drilled in one of the leg bases to prevent water from being trapped within the leg and provide a wire chase for accessories. A small hole is drilled in the tubing at the base of legs that are not drilled for a wire chase to allow water to drain.



ALWAYS MAKE SURE THE LEG DRAIN HOLES ARE CLEAR WHEN THE BOAT IS LAID UP FOR THE WINTER. WATER TRAPPED INSIDE THE TOWER LEGS COULD FREEZE AND CAUSE THE LEGS TO SPLIT.

7.3 Bilge Drainage

Bilge pumps are activated both manually, by a switch in the helm station, and automatically, by a float switch located next to the pump in the bilge. The automatic float switch remains activated when the battery switches are in the off position. All bilge pumps pump water out of thru hulls located above the waterline in the hull.

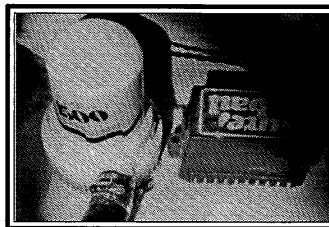

NOTE: See Electrical Systems for additional information on bilge pump operation.

IMPORTANT: Any oil spilled in the bilge must be thoroughly removed and properly disposed of before operating the bilge pumps. The discharge of oil from the bilge is illegal and subject to a fine.



THE FEDERAL WATER POLLUTION CONTROL ACT PROHIBITS THE DISCHARGE OF OIL OR OILY WASTE INTO OR UPON THE NAVIGABLE WATERS OF THE UNITED STATES OR THE WATERS OF THE CONTIGUOUS ZONE IF SUCH DISCHARGES CAUSE A FILM OR SHEEN UPON OR A DISCOLORATION OF THE SURFACE OF THE WATER OR CAUSES A SLUDGE OR EMULSION BENEATH THE SURFACE OF THE WATER. VIOLATORS ARE SUBJECT TO A PENALTY OF \$5,000.



CERTAIN BULKHEAD AREAS ARE SEALED IN ACCORDANCE WITH U.S. COAST GUARD REGULATIONS THAT WERE IN EFFECT AT THE DATE OF MANUFACTURE OF THE BOAT. ANY MODIFICATIONS TO THESE BULKHEADS SHOULD BE IN ACCORDANCE WITH THE U.S. COAST GUARD REGULATIONS.

7.4 Fish Box Drainage

The fish box is drained by a pump. The pump is activated manually by a switch located in the helm or in the rear of the cockpit. Water is pumped out of a thru hull fitting located in the hull side above the waterline. A strainer in the fishbox and an in line strainer protect the pump and must be cleaned frequently. The fishbox should be pumped out and cleaned after each use. Always turn the pump off after the fishbox is drained. The pump could be damaged if it is allowed to run dry.

7.5 Water System Drains

All sinks and livewells provided with fresh or raw water drain by gravity, to overboard thru hulls located in the hull sides just above the waterline. The overflows in the livewells drain into the overboard drains.

7.6 Maintenance

It is essential that the following items be done periodically to maintain proper drainage of your boat:

- Clean the cockpit drain rails with a hose to remove debris that can block water drainage.
- Clean the T-Top leg drain holes. This is especially important just before winter lay-up.
- Clean the bilge pump strainers of debris and check the bilge for foreign material that can cause the automatic switches to malfunction.
- Frequently test the automatic bilge pump switches for proper operation.
- Flush all gravity drains with fresh water to keep them clean and free flowing.
- Frequently clean the fish box strainers of debris. Clean and flush the boxes with soap and fresh water or a bilge cleaner after each use to keep them clean and fresh.

NOTE: All drains and pumps must be properly winterized before winter lay-up.



NEVER USE HARSH CHEMICAL DRAIN CLEANERS IN MARINE DRAIN SYSTEMS. PERMANENT DAMAGE TO THE HOSES AND FITTINGS MAY RESULT.


Chapter 8: **VENTILATION SYSTEM**

8.1 Head Compartment Ventilation

Ventilation to the cabin area is provided by an opening port window.

Maintenance

- Periodically lubricate all hinges and latch assemblies with a light oil.
- Periodically clean and coat gasket material with silicone to help keep them pliable.

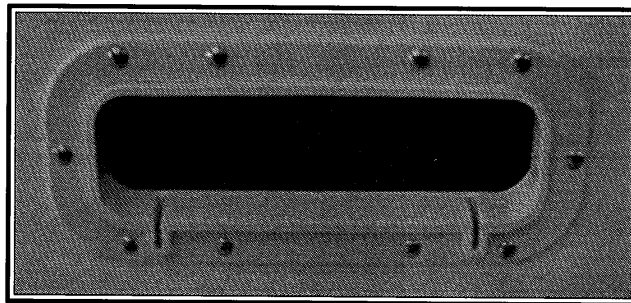

Chapter 9: **SAFETY EQUIPMENT**

9.1 Engine Alarm

Most outboards are equipped with an audible alarm system mounted in the helm area that monitors selected critical engine systems. The alarm will sound if one of these systems begins to fail. Refer to the engine owner's manual for information on the alarms installed with your engines.

If the alarm sounds:

- Immediately throttle the engines back to idle.
- Shift the transmissions to neutral.
- Monitor the engine gauges to determine the cause of the problem.
- If necessary, shut off the engines and investigate until the cause of the problem is found.

9.2 Neutral Safety Switch

Every control system has a neutral safety switch incorporated into it. This device prohibits the engine from being started while the shift lever is in any position other than the neutral position. If the engine will not start, slight movement of the shift lever may be necessary to locate the neutral position and disengage the safety cutout switch. Control or cable adjustments may be required to correct this condition should it persist. See your Pursuit dealer for necessary control and cable adjustments.

9.3 Kill Switch

All Pursuit boats rigged with outboard motors are equipped with a kill switch and lanyard. When the lanyard is pulled it will engage the switch and shut off the engine(s). We strongly recommend that the lanyard be attached to the driver whenever the engine is running. If the engines will not start, it could be because the lanyard is not properly inserted into the kill switch. Always make sure the lanyard is properly attached to the kill switch before attempting to start the engines.

9.4 Fire Extinguisher

At least one fire extinguisher is required on all Pursuit boats. Contact the U.S. Coast Guard Boating Safety Hotline, 1-800-368-5647 or 1-202-267-1070, for information on the type and size fire extinguisher required for your boat. Fire extinguishers require regular inspections to insure they are charged and ready for use.

Please refer to the information provided by the fire extinguisher manufacturer for instructions on the proper maintenance and use of your fire extinguisher.

9.5 Required Safety Equipment

Besides the equipment installed on your boat by Pursuit, certain other equipment is required to help ensure passenger safety. Items like a sea anchor, working anchor, extra dock lines, flare pistol, life vests, a line permanently secured to your ring buoy, etc. could at some time save your passengers lives, or save your boat from damage. Contact the U.S. Coast Guard Boating Safety Hotline, 1-800-368-5647 or 1-202-267-1070, for information on boat safety courses and brochures listing the Federal equipment requirements. Also, check your local and state regulations.

The Coast Guard Auxiliary offers a "Courtesy Examination." This inspection will help ensure that your boat is equipped with all of the necessary safety equipment.

Chapter 10: **OPERATION**

10.1 General

Before you start the engines on your Pursuit, have you become familiar with various component systems and their operation? Do you have the necessary safety equipment on board? Do you know and understand the “Rules of the Road?” Has an experienced pilot briefed you on the general operation of your new boat? Have you performed a “Pre-Cruise System Check?”

A thorough understanding of the component systems and their operation is essential to the proper operation of the boat. This manual and the associated manufacturer's information is provided to enhance your knowledge of your Pursuit boat. Read them carefully.

Maintenance and service tips are included to help you keep your boat in like-new condition.

10.2 Rules of the Road

As in driving an automobile, there are a few rules you must know for safe boating operation. The Coast Guard, Coast Guard Auxiliary, Department of Natural Resources, or your local boat club sponsor courses in boat handling, including rules of the road. We strongly recommend such courses. Books on this subject are also available from your local library.

10.3 Pre-Cruise Check

Before Starting the Engines

- Check the weather forecast. Decide if the planned cruise can be made safely.
- Check the bilge water level. Look for other signs of potential problems. Monitor for the scent of fuel fumes.
- Check the engine oil tank and other fluid levels.
- Check the water separating fuel filters for water.

- Set the Battery Selector Switches as desired.
- Be sure all necessary safety equipment is on board and operative. This should include items like the running lights, spotlight, life saving devices, etc. Please refer to Chapter 9 for additional information on safety equipment.
- Be sure the 110 volt power cord is disconnected.
- Be sure the Dockside Water Supply Line is disconnected.
- Check the amount of fuel on board.
- Set the fuel tank selector valves to the proper tanks.
- Be sure you have sufficient water and other provisions for the planned cruise.
- Make sure you have signal kits and flare guns aboard, and they are in good operating condition.
- Have a tool kit aboard. The kit should include the following basic tools:

Spark plug wrench	Hammer
Spark plug gap gauge	Electrician's tape
Screwdriver	Lubricating oil
Pliers	Jackknife
Adjustable wrench	Vise grip
Pipe wrench	



THERE MUST BE AT LEAST ONE PERSONAL FLOTATION DEVICE ONBOARD FOR EVERY PERSON ONBOARD AND ONE THROW-OUT FLOTATION DEVICE. CHECK THE U.S. COAST GUARD STANDARDS FOR THE CORRECT TYPE OF DEVICE FOR YOUR BOAT.

- Have the following spare parts on board:

Extra light bulbs	Spark plugs
Fuses	Flashlight and batteries
Drain plug	Engine oil
Propeller	Fuel filters
Propeller nut and washer	Fuel hose and clamps

- Make sure all fire extinguishers are in position and in good operating condition.



**VAPORIZING LIQUID EXTINGUISHERS GIVE OFF TOXIC FUMES;
USE ONLY COAST GUARD APPROVED FIRE EXTINGUISHERS.**

- Leave a written message listing details of your planned cruise with a close friend ashore. (Float Plan)

10.4 Operating Your Boat

After Starting the Engines



TO REDUCE THE RISK OF A FIRE OR EXPLOSION, DO NOT START THE ENGINES WHEN FUEL FUMES ARE PRESENT. FUEL FUMES ARE DANGEROUS AND HARMFUL TO YOUR HEALTH.

- Visibly check the engine to be sure there are no apparent water, fuel or oil leaks.
- Check the operation of the engine cooling system. (Refer to section 1.4)
- Check the engine gauges. Make sure they are reading normally.
- Check the controls for proper operation.
- Make sure all lines, cables, anchors, etc. for securing a boat are on board and in good condition. All lines should be coiled, secured and off the decks when underway.
- Have a safe cruise and enjoy yourself.

Remember

When you operate a boat, you accept the responsibility for the boat, for the safety of passengers and for others out enjoying the water.

- Alcohol and any drugs can severely reduce your reaction time and affect your better judgement.
- Alcohol severely reduces the ability to react to several different signals at once.
- Alcohol makes it difficult to correctly judge speed and distance, or track moving objects.
- Alcohol reduces night vision, and the ability to distinguish red from green.

YOU SHOULD NEVER OPERATE YOUR BOAT WHILE UNDER THE INFLUENCE OF ALCOHOL AND DRUGS.

- Avoid sea conditions that are beyond the skill and experience of you and your crew.



MAKE SURE ONE OTHER PERSON ON THE BOAT IS INSTRUCTED IN THE OPERATION OF THE BOAT.



MAKE SURE THE BOAT IS OPERATED IN COMPLIANCE WITH ALL STATE AND LOCAL LAWS GOVERNING THE USE OF A BOAT.



DO NOT OPERATE THE BOAT UNLESS IT IS COMPLETELY ASSEMBLED. KEEP ALL FASTENERS TIGHT. KEEP ADJUSTMENTS ACCORDING TO SPECIFICATIONS.

Before operating the boat for the first time, read the engine break-in procedures. The break-in procedures are found in the owner's manual for the engine. The manual is in the literature packet.

As different types of engines are used to power the boat, have the dealer describe the operating procedures for your boat. For more instructions on "How To Operate The Boat," make sure you read the instructions given to you in the owner's manual for the engine you have selected.

Note: For more instructions on safety, equipment and boat handling, enroll in one of the several free boating courses offered. For information on the courses offered in your area, call the "Boating Course Hotline," 1-800-336-2628.

Note: If the drive unit hits an underwater object, stop the engine. Inspect the drive unit for damage. If the unit is damaged, contact your dealer for a complete inspection and repair of the unit.

To stop the boat, follow this procedure:

- Allow the engine to drop to the idle speed.
- Make sure the shifting lever is in the neutral position.

Note: If the engines have been run at high speed for a long period of time, allow the engines to cool down by running the engines in the idle position for 3 to 5 minutes.

- Turn the ignition keys to the “Off” position.

After Operation

- If operating in salt water, wash the boat and all equipment with soap and water.
- Check the bilge area for debris and excess water.
- Fill the fuel tank to near full to reduce condensation.
- Turn off all electrical equipment except the automatic bilge pumps.
- If you are going to leave the boat for a long period of time, put the battery main switch in the “Off” position and close all seacocks.
- Make sure the boat is securely moored.



TO PREVENT DAMAGE TO THE BOAT, CLOSE ALL SEACOCKS BEFORE LEAVING THE BOAT.

10.5 Grounding and Towing

If the boat should become disabled, or if another craft that is disabled requires assistance, great care must be taken. The stress applied to a boat during towing may become excessive. Excessive stress can damage the structure of the boat and create a safety hazard for those aboard.

Freeing a grounded vessel, or towing a boat that is disabled, requires specialized equipment and knowledge. Line failure and structural damage caused by improper towing have resulted in fatal injuries. Because of this, we strongly suggest that these activities be left to those who have the equipment and knowledge, e.g., the U.S. Coast Guard or a commercial towing company, to safely accomplish the towing task.



THE MOORING CLEATS ON PURSUIT BOATS ARE NOT DESIGNED OR INTENDED TO BE USED FOR TOWING PURPOSES. THESE CLEATS ARE SPECIFICALLY DESIGNED AS MOORING CLEATS FOR SECURING THE BOAT TO A DOCK, PIER, ETC. DO NOT USE THESE FITTINGS FOR TOWING OR ATTEMPTING TO FREE A GROUNDED VESSEL.



WHEN TOWING OPERATIONS ARE UNDERWAY, HAVE EVERYONE ABOARD BOTH VESSELS STAY CLEAR OF THE TOW LINE AND SURROUNDING AREA. A TOW LINE THAT SHOULD BREAK WHILE UNDER STRESS CAN BE VERY DANGEROUS.



RUNNING AGROUND CAN CAUSE SERIOUS DAMAGE TO A BOAT AND ITS UNDERWATER GEAR. IF YOUR BOAT SHOULD BECOME GROUNDED, DISTRIBUTE PERSONAL FLOTATION DEVICES AND INSPECT THE BOAT FOR POSSIBLE DAMAGE. THOROUGHLY INSPECT THE BILGE AREA FOR SIGNS OF LEAKAGE. AN EXPERIENCED SERVICE FACILITY SHOULD CHECK YOUR UNDERWATER GEAR AT THE FIRST OPPORTUNITY. DO NOT CONTINUE TO USE YOUR BOAT IF THE CONDITION OF THE UNDERWATER EQUIPMENT IS QUESTIONABLE.

10.6 Trailering Your Boat

Note: Contact your dealer to evaluate your towing vehicle and hitch, and to make sure you have the correct trailer for your boat.

- Make sure the trailer is a match for your boat's weight and hull design.
- The gross vehicle weight rating must be shown on the trailer. Make sure the weight of the boat, engine, gear and trailer is not more than the gross vehicle weight rating.
- Make sure the boat is securely fastened on the trailer to prevent movement between the boat and trailer.

Note: Your dealer will give instructions on how to load, fasten and launch your boat.



MAKE SURE YOUR TOWING VEHICLE AND TRAILER ARE IN COMPLIANCE WITH ALL STATE AND LOCAL LAWS. CONTACT YOUR STATE MOTOR VEHICLE BUREAU FOR LAWS GOVERNING THE TOWING OF TRAILERS.

Chapter 11: **EXTERIOR EQUIPMENT**

11.1 Deck

Rails and Deck Hardware

The rail system and hardware fittings have been selected and installed to perform specific functions. Fenders or mooring lines should be secured to the cleats and not to rails or stations. The stern is equipped with a hawse pipe and cleat system. Mooring lines should be fed through the hawse pipes then secured to the stern cleats. Be sure a clear lead exists when running dock lines or anchor lines. A line inadvertently run around a stanchion or over the rail could cause damage.

IMPORTANT: All fittings must be periodically inspected for loose fit, wear and damage. Any problems should be corrected immediately.



PURSUIT BOATS ARE NOT EQUIPPED WITH HARDWARE DESIGNED FOR TOWING PURPOSES. THE MOORING CLEATS ARE NOT TO BE USED FOR TOWING ANOTHER VESSEL OR HAVING THIS BOAT TOWED.

Bow Pulpit and Roller (Optional)

The bow pulpit can be equipped with a roller assembly that allows the anchor to be operated and stored at the pulpit. The anchor line is stored in the rope locker and routed out the rope locker hatch, through the roller and connected to the anchor chain. Always make sure the anchor is properly secured when it is in the stored position on the pulpit.

Anchor /Rope Locker

The anchor locker is in the bow of the boat and accessed through a hatch in the deck. The anchor line is always stored in the locker. The anchor can be mounted on the deck or stored in the anchor locker. If the anchor is stored in the anchor locker it must be properly secured to prevent it from bouncing in the locker and causing damage to the hull or anchor locker.



THE ANCHOR MUST BE POSITIONED SO IT DOES NOT REST AGAINST THE HULL SIDES AND BE PROPERLY SECURED AT ALL TIMES WHEN IT IS STORED IN THE ANCHOR LOCKER. A LOOSE ANCHOR IN THE ANCHOR LOCKER WILL BOUNCE AND CAN DAMAGE THE BOAT. DAMAGE RESULTING FROM THE ANCHOR BOUNCING IN THE ANCHOR LOCKER IS NOT COVERED BY THE PURSUIT WARRANTY.

The anchor locker is drained overboard by drain fittings in the hull at the floor of the locker. It is very important to check the drain frequently to make sure it is clean and free flowing.

11.2 Hull

Aluminum Engine Bracket and Swim Platform

Your Pursuit is equipped with an aluminum engine bracket and swim platform mounted on the transom of the boat. An optional removable boarding ladder attaches to a mount built into the swim platform. The ladder must be removed and stored inside the boat when the boat is underway. There are two inspection hatches on the platform that are used to access the inside of the bracket. Always make sure these are secure before operating your boat.



NEVER USE A BOARDING LADDER OR SWIM PLATFORM WHEN THE ENGINE IS RUNNING OR THE BOAT IS IN MOTION.

A zinc anode is attached to the bottom of the bracket to protect it from corrosion. A badly corroded zinc can cause the bracket to leak. The zinc should be checked monthly and changed as needed.

The bracket should be checked for water frequently. It is normal for a small amount of water to accumulate in the bracket and it will have to be drained from time to time. A drain plug in the bottom is provided to drain water from the bracket when the boat is out of the water.



NEVER OPERATE THE BOAT WITH A BRACKET THAT HAS DEVELOPED A LEAK. IF THIS SHOULD OCCUR, STOP USING THE BOAT UNTIL THE LEAK IS FOUND AND REPAIRED.

11.3 Cockpit Equipment

Bow Storage Compartments

There are 3 storage compartments located in the bow. The port and starboard compartments have rod racks and additional room for dunnage. The center compartment has a special mount for storing the console instrument cover, provides access to the water and holding tanks, and has additional room for dunnage.

Leaning Post/Bait and Tackle Rigging Station

The leaning post/bait and tackle station is equipped with a sink, a cooler, tackle drawers and a storage compartment. The sink is plumbed to the freshwater system. The storage compartment contains the batteries and has additional room for storage. The cooler drains overboard and can be plumbed to be a livewell (optional).

Stern Bait and Tackle Rigging Station

The stern bait and tackle rigging station is equipped with a sink, removable cutting board, livewell and rigged bait storage area. The sink is plumbed to the raw water washdown system and the livewell is supplied by a separate raw water aerator pump. Refer to Chapter 6 for additional information on the raw water systems.

11.4 Center Console

Helm and Electronics Locker

The helm and engine controls are located on the rear of the center console. Molded-in electronics storage is located forward of the engine controls. The electronics are protected with lockable plastic door that can be removed and stored when the electronics are in use. The door has a vinyl storage cover and can be secured in a special mount located in the forward center cockpit storage compartment.

The top section of the console is hinged and opens to provide access to service the helm equipment or to install electronics. To open the console, remove the threaded knobs in the ceiling of the head compartment. The front of the console can then be lifted to expose the underside of the helm. A strap holds the helm in the open position and prevents it from opening too far. Always make sure the hand screws are properly secured when the helm is closed.



ALWAYS MAKE SURE THE THREADED KNOBS ARE TIGHT BEFORE OPERATING OR TRAILERING YOUR BOAT. IF THE TOP OF THE CONSOLE IS NOT PROPERLY SECURED, IT COULD OPEN UNEXPECTEDLY AND DAMAGE THE BOAT OR CAUSE LOSS OF CONTROL.

Head Compartment

The head compartment is located in the console. A door in the starboard side of the console provides access to the head. The optional 110 volt electrical panel, battery charger, porta potti or head and Y-valve are among the equipment mounted in this compartment. Refer to Chapter 12 and Chapter 4 for information on the equipment in the head compartment.

Console Cooler

A molded insulated cooler is installed under the front seat of the console. The cooler drains overboard through a fitting in the side of the hull.

Chapter 12: **INTERIOR EQUIPMENT**

12.1 Portable Head

The Portable Head is provided as standard equipment. The system is made up of two major components, an upper tank and a lower tank. The upper tank contains the fresh water supply, a bellows pump, a seat and the lid. The bottom tank contains the flush valve, a waste holding tank, a chemical storage compartment and the drain nozzle. The components are secured together by a clamping mechanism when the Portable Head is ready for use.

In some areas the law requires that Portable Heads be equipped with an optional permanent deck mounted pump out system to evacuate the waste with a dock side pump. Boats with a Portable Head pump out will be equipped with a deck fitting marked "waste" located on the deck. Since this system is required to be permanent, the bottom waste tank cannot be removed and the only way to evacuate the system is by a dock side pump.

To use the Portable Head, add the recommended amount of holding tank deodorant to the waste tank and fill the freshwater tank. To flush after use, pull the waste valve handle straight out, then press flushing bellows one or more times to rinse. To close and seal the waste holding tank, simply push the valve handle all the way in. Monitor the level in the waste tank and empty as necessary.

Maintenance

To keep your Portable Head operating properly it must be emptied and properly cleaned periodically. Please refer to the manufacturer owner's manual for detailed instructions on the proper operation of your Portable Head.



IN SOME AREAS THE LAW REQUIRES A WASTE PUMP OUT SYSTEM ON PORTABLE HEADS. IF YOUR BOAT IS EQUIPPED WITH THE OPTIONAL WASTE PUMP OUT, MAKE SURE YOU KNOW THE LAWS FOR THE AREAS IN WHICH YOU BOAT BEFORE MODIFYING OR REMOVING THE PUMP OUT SYSTEM.




THE PORTABLE HEAD MUST BE PROPERLY WINTERIZED BEFORE WINTER LAY-UP OR FOR COLD WEATHER USE. PLEASE REFER TO THE MANUFACTURER OWNER'S MANUAL FOR COLD WEATHER AND WINTERIZING INSTRUCTIONS.

12.2 Marine Head System (Optional)

This system is provided as optional equipment. The flush water is supplied by a thru hull fitting and a raw water line. Before using, open the inlet valve and pump to wet the inside of the bowl. After use, close the valve and pump to discharge the waste to the holding tank or overboard.

Waste can be directed either into the holding tank or overboard, when legal to do so. This is accomplished by a Y-valve located in the head compartment under the sink.

In the overboard discharge position, the waste exits the boat through a large thru hull fitting located in the stern bilge. The thru hull fitting is equipped with a ball valve. Always open this valve when the overboard discharge is selected and close it when the holding tank is selected.

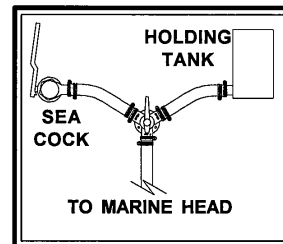

In the holding tank position, the waste is pumped directly into the holding tank where it remains until it is pumped out by a waste dumping station or the optional overboard discharge system.



IN MANY AREAS IT IS ILLEGAL TO FLUSH HEAD WASTE DIRECTLY OVERBOARD. VIOLATION OF THESE POLLUTION LAWS CAN RESULT IN FINES OR IMPRISONMENT. ALWAYS KNOW THE LAW FOR THE AREAS IN WHICH YOU BOAT. NEVER DUMP HEAD OR HOLDING TANK WASTE OVERBOARD ILLEGALLY.

Holding Tank

The holding tank is located in the bilge area. When the tank is full it must either be pumped out by an approved waste dumping station through the waste deck fitting or be pumped overboard with the optional macerator discharge pump, when legal to do so.

To operate the macerator discharge pump, open the ball valve between the macerator and the overboard discharge thru hull. Then activate the macerator switch until the tank is emptied. Turn the switch to off and close the discharge ball valve when pumping is complete.

Maintenance

The head should be cleaned and inspected for leaks regularly.

The holding tank should be pumped out and flushed as needed. Periodically add chemical to the head to help control odor and to chemically break down the waste. See the manufacturers owner's manuals for additional operating and maintenance information.



THE HEAD SYSTEM MUST BE PROPERLY WINTERIZED BEFORE WINTER LAY-UP. SEE SECTION ON WINTERIZING.

Chapter 13: **ROUTINE MAINTENANCE**

13.1 Exterior Hull and Deck

Hull Cleaning-Below The Water Line

When the boat is removed from the water, clean the outer bottom surface immediately. Algae, grass, dirt and other marine growth is easier to remove while the hull is still wet. Use a pressure cleaner or a hard bristle brush to clean the surface.



TO PREVENT DAMAGE TO THE FIBERGLASS, DO NOT SAND THE OUTER BOTTOM SURFACE OF THE BOAT.

If the hull bottom has been painted with anti-fouling paint, contact your dealer for the recommended maintenance procedures.

Bottom Painting

If the boat is to be left in salt water for extended periods, the hull must be protected from marine growth by anti-fouling paint. Because of variations in water temperature, marine growth, and pollution in different regions, your dealer and/or a qualified boat yard in your area should be consulted when deciding what bottom paint system to apply to your hull. This is extremely important as pollution and marine growth can damage fiberglass hulls.

Zincs

Sacrificial zincs are installed on the outboard engines, the outboard bracket and should be installed on the trim tabs if the boat is to be left in the water. Contact your dealer for the proper size and type of zincs to be used and the specific installation procedure. Zincs should be checked monthly and changed when they are 75% of their original size.

Fiberglass Gelcoat Surfaces

Normal maintenance requires only washing with mild soap and water. A stiff brush can be used on the non-skid areas. Kerosene or commercially prepared products will remove oil and tar which could be a problem on trailered boats. Harsh abrasive and chemical cleaners are not recommended because they can damage or dull the gelcoat, reducing its life and making it more susceptible to stains. When the boat is used in salt water, it should be washed thoroughly with soap and water after each use.

At least once a season, wash and wax all exposed fiberglass surfaces. Use a high quality automotive or boat wax. Follow the procedure recommended by the wax manufacturer.

The washing and waxing of your boat will have the same beneficial effects as they have on an automobile finish. The wax will fill minute scratches and pores thus helping to prevent soiling and will extend the life of the gelcoat.

After the boat is exposed to the direct sunlight for a period of time, the color in the gelcoat tends to fade, dull or chalk. A heavier buffing is required to bring the gelcoat back to its original luster. For power cleaning use a light cleaner. To clean the boat by hand, use a heavier automotive cleaner. Before cleaning the surfaces, read the instructions given with the cleaner. After cleaning the surfaces, apply wax and polish all fiberglass surfaces except the non-skid areas.

A pamphlet called "Congratulations Welcome to the Fiberglass Fleet" is included in the literature packet. For more information on the care of fiberglass, read the pamphlet.

If the fiberglass should become damaged and need repair, contact your dealer for an authorized repair person to make the repairs.



DO NOT WAX NON-SKID AREAS AS THIS COULD MAKE THEM SLIPPERY AND CONSEQUENTLY INCREASE THE POSSIBILITY OF INJURY.

Stainless Steel Hardware

When using the boat in salt water, the hardware should be washed with soap and water after each use. When your boat is used in a corrosive environment such as salt water, water with a high sulfur content, or polluted water, the stainless steel will periodically develop surface rust stains. This is perfectly normal under these conditions. The stainless can normally be cleaned and protected by using a high quality boat or automotive wax or a commercial metal cleaner and protectant.



UNDER NO CIRCUMSTANCES SHOULD ANY ABRASIVE MATERIALS SUCH AS SANDPAPER, BRONZE WOOL, OR STEEL WOOL BE USED ON STAINLESS STEEL. DAMAGE TO THE HARDWARE WILL RESULT.

Anodized Aluminum Surfaces

Normally, the only maintenance that is required with anodized aluminum is to periodically wash it with soap and water. If the boat is used in salt water or polluted water, the aluminum should be washed with soap and water after each use. Salt water allowed to remain on anodized aluminum could penetrate the anodized coating and attack the aluminum.

If the anodized coating is badly scratched it can be touched up with a paint such as Rustoleum aluminum paint. With proper care, anodized aluminum will provide many years of maintenance free service.

Chrome Hardware

Use a good chrome cleaner and polish on all chrome hardware.

Plexiglas

Use only mild soap and water to clean plexiglass. Solvents and products containing ammonia can permanently damage plexiglass. A coat of automotive, or boat, wax is beneficial to protect the surface.

Engines

If the boat is used in salt water, flush the cooling system after each daily use. To flush the system when the boat is out of the water, follow this procedure:

- Install a flush-test device over the water inlet holes on the gear housing.
- Connect one end of a garden hose to the flush-test device.
- Connect the other end of the garden hose to the water supply outlet.



TO PREVENT DAMAGE TO THE ENGINE, DO NOT USE FULL CITY WATER PRESSURE.

- Turn the faucet for the water supply to the half-way open position.
- Put the control handle in the "Neutral" position.
- Start the engine.
- Put the control handle in the "Idle" position.
- Let the engine run for 10 minutes or until the discharge water is clean.
- Stop the engine.
- Turn off the water supply.
- Remove the garden hose from the flush-test device and the water supply outlet.
- Remove the flush-test device.

13.2 Upholstery, Canvas and Enclosures

Vinyl Upholstery

The vinyl upholstery used on the exterior seats and bolsters in your boat should be cleaned periodically with soap and water. Avoid using products containing ammonia or harsh chemicals as they can shorten the life of vinyl. A vinyl protector will protect and extend the life of vinyl. One drawback to vinyl protectors is that they may make the vinyl slippery. You may find this to be undesirable in some applications.

Acrylic Canvas

Acrylic canvas should be cleaned periodically by using a mild detergent and water. Scrub lightly and rinse thoroughly.

After several years, the acrylic canvas may lose some of its ability to shed water. If this occurs, wash the fabric and treat it with a commercially available water proofing designed for this purpose.

Note: Some leakage at the seams is normal and unavoidable with acrylic enclosures.

Side curtains and clear connectors can be cleaned with mild soap and water. They should not be allowed to become badly soiled. Dirt, oil, mildew, and cleaning agents containing ammonia, will shorten the life of the vinyl that is used for clear curtains. After cleaning the curtains and allowing them to dry, apply a non-lemon furniture polish or a plexiglas and clear plastic protector to extend the life of the curtains.



DO NOT USE ANY POLISH CONTAINING LEMON SCENTS OR LEMON. THE LEMON JUICE WILL ATTACK THE VINYL AND SHORTEN ITS LIFE.

13.3 Cabin Interior

The cabin interior can be cleaned just like you would clean a home interior. To preserve the teak woodwork, use teak oil. To maintain the carpeting, use a vacuum cleaner. Because air and sunlight are very good cleansers, periodically put cushions, sleeping bags, etc. on deck, in the sun and fresh air, to dry and air out. If cushions or equipment get wet with salt water, remove and use clean, fresh water to rinse off the salt crystals. Salt retains moisture and will cause damage. Dry thoroughly and reinstall.

If you leave the boat for a long period of time, put all cushions on their sides, open all interior cabin and locker doors, and hang a commercially available mildew protector in the cabin.



ALWAYS READ THE LABEL CAREFULLY ON MILDEW PROTECTORS. REMOVE THE PROTECTOR AND ALLOW THE CABIN TO VENTILATE COMPLETELY BEFORE USING THE CABIN.

13.4 Bilge

To keep the bilge clean and fresh, it is recommended that you use a commercial bilge cleaner on a regular basis. Follow the directions carefully. All exposed pumps and metal components in the bilge should be sprayed periodically with a protector to reduce the corrosive effects of the high humidity always present in these areas.

Chapter 14: **SEASONAL MAINTENANCE**

14.1 Lay-up and Storage

Before Hauling

- Pump out the head. Flush the holding tank using clean soap, water and a deodorizer. Pump out the cleaning solution.
- Fuel tank(s) should be left nearly full. In winter storing with a full tank, a fuel winterizer is recommended to reduce fuel deterioration. For more recommendations for your specific area, check with your local Pursuit dealer. Operate the boat for 15 minutes to allow the treated fuel to reach the engine(s).
- Drain water from the fresh water system.
- Consult the engine owner's manual for detailed information on preparing the engines for storage.

Lifting



BOATS HAVE BEEN DAMAGED FROM IMPROPER LIFTING AND TRANSPORTING WITH FORKLIFTS. CARE AND CAUTION MUST BE EXERCISED WHEN TRANSPORTING A BOAT WITH A FORK LIFT. NEVER HOIST THE BOAT WITH A SUBSTANTIAL AMOUNT OF WATER IN THE BILGE.



SEVERE GELCOAT CRAZING OR MORE SERIOUS HULL DAMAGE CAN OCCUR DURING HAULING AND LAUNCHING IF PRESSURE IS CREATED ON THE GUNWALES (SHEER) BY THE SLINGS. SPREADERS ARE NOT REQUIRED IF BELTS ARE NOT CREATING PRESSURE (CABLE DRUMS FURTHER APART THAN BEAM OF BOAT). FLAT, WIDE BELTING SLINGS AND SPREADERS LONG ENOUGH TO KEEP PRESSURE FROM THE GUNWALES ARE ESSENTIAL. DO NOT ALLOW ANYONE TO HAUL YOUR BOAT WHEN THE SPREADERS ON THE LIFT ARE NOT WIDE ENOUGH TO TAKE THE PRESSURE OFF THE GUNWALES.

Supporting The Boat For Storage

Your trailer or a well-made cradle is the best support for your boat during storage.

When storing the boat on a trailer for a long period:

- Make sure the rollers and pads support the hull of the boat.
- Make sure the trailer hitch is level and there is support under the hitch.
- Make sure the engines are in the down position.
- Check the tires once each season. Add enough air for the correct amount of inflation for the tires.

NOTE: Read the owner's manual for the trailer for the correct amount of inflation for the tires.

When Storing The Boat On A Cradle:

- The cradle must be specifically for boat storage.
- Make sure the cradle is well supported and placed on a level surface.
- The cradle must be in the proper fore and aft position to properly support the hull. When the cradle is in the correct location, the bunks should match the bottom of hull.

Preparing The Boat For Storage

- Remove the bilge drain plug(s), if installed.
- Thoroughly wash the fiberglass exterior, especially the anti-fouling portion of the bottom. Remove as much marine growth as possible. Lightly wax the exterior fiberglass components.
- Remove all oxidation from the exterior hardware, and apply a light film of moisture displacing lubricant.
- Remove propellers and grease the propeller shaft using light waterproof grease.
- Remove the battery(s) and store in a cool place. Clean using clear, clean water. Be sure the battery has sufficient water and clean terminals. Keep the battery charged and safe from freezing throughout the storage period.

Note: Refer to Chapter 4, Electrical Systems, for information on the maintenance of the A.C. and D.C. electrical systems.

- Coat all faucets and exposed electrical components in the cabin and cockpit with a protecting oil.
- Clean out, totally drain and completely dry the fish boxes.
- Thoroughly clean the interior of the boat. Vacuum all carpets and dry clean drapes and upholstery jackets.
- Remove as many cushions and open as many locker doors as possible. Leaving as many of these areas open as possible will improve the boat's ventilation during the storage period.

SPECIAL NOTE: It is recommended that a mildew preventer be hung in the boat's cabin before it is closed for storage.

- Clean the exterior upholstery with a good vinyl cleaner and dry thoroughly. Spray the weather covers and boat upholstery with a spray disinfectant. Enclosed areas such as the refrigerator, shower basin, storage locker areas, etc. should also be sprayed with this disinfectant.

14.2 Winterizing

Fresh Water System

The entire fresh water system must be completely drained. Disconnect all hoses, check valves, etc. and blow all the water from the system. Use only very low air pressure when doing this to prevent possible system damage. A recommended alternative to the above mentioned procedure is the use of commercially available non toxic, fresh water system antifreeze. After draining the potable water lines and hot water tanks, pour the antifreeze mixture into both fresh water tanks, prime and operate pumps until the mixture flows from all fresh water faucets. Be sure antifreeze has flowed through all of the fresh water drains.

For additional information on the Fresh Water System refer to Chapter 5.

Raw Water System

Completely drain the raw water systems and follow the same procedure recommended for the fresh water system. If potable water antifreeze is used, run all pumps one at a time until the antifreeze solution is visible at all raw water faucets and discharge fittings and drains.

The head must be properly winterized by following the manufacturer's winterizing instructions in the Marine Toilet owner's manual. Drain the intake and discharge hoses completely using low air

pressure if necessary. The head holding tank must be pumped dry and 1 gallon of potable water antifreeze poured into the tank through the deck waste pump out fitting.

For additional information on the Raw Water System refer to Chapter 6.

Bilge

Coat all metal components, wire busses, and connector plugs, in the bilge and engine room, with a protecting oil. It is also important to protect all strainers, seacocks and steering components. The bilge pumps and bilge pump lines must be completely free of water and dried out when the boat is laid-up for the winter in climates where freezing occurs. Compartments in the bilge that will not drain completely should be pumped out and then sponged until completely free of water.

Dry the hull bilge and self-bailing cockpit troughs. Water freezing in these areas could cause damage.

Aluminum Engine Bracket

Remove the drain plug at the bottom of the bracket and leave it out until the boat is recommissioned. Rinse the inside of the bracket with fresh water. Check the zinc and install a new one if necessary. Spray the inside of the bracket and the engine mounting bolts with a metal protector.



MAKE SURE NO WATER CAN BE TRAPPED IN THE BRACKET. TRAPPED WATER CAN FREEZE CAUSING PERMANENT DAMAGE TO THE BRACKET.

Hard Tops And T-Tops

It is imperative that all drain holes in the legs are open and completely free of water. Remove the canvas and thoroughly clean and store in a safe, dry place. Remove all electronics. Coat all wire connectors and bus bars in the helm compartment with a protecting oil.

Special Notes Prior To Winter Storage

If the boat will be in outside storage, properly support a storage cover and secure it over the boat. It is best to have a frame built over the boat to support the canvas. It should be a few inches wider than the boat so the canvas will clear the rails and allow passage of air. If this cover is fastened too tightly there will be inadequate ventilation and this can lead to mildew, moisture accumulation, etc. It is essential to fasten the canvas down securely so that the winds cannot remove it or cause chafing of the hull superstructure. Do not store the boat in a damp storage enclosure. Excessive dampness can cause electrical problems, corrosion, and excessive mildew.

Whenever possible, do not use the bimini top or convertible top canvas in place of the winter storage cover. The life of these canvases may be significantly shortened if exposed to harsh weather elements for long periods.



PLACING AN ELECTRIC OR FUEL BURNING HEATING UNIT IN THE BILGE AREA CAN BE POTENTIALLY HAZARDOUS AND IS NOT RECOMMENDED.

Proper storage is very important to prevent serious damage to the boat. If the boat is to be stored indoors, make sure the building has enough ventilation. It is very important that there is enough ventilation both inside the boat and around the boat.

Note: If the boat is to be stored indoors or outdoors, open all drawers, clothes lockers, cabinets, and doors a little. If possible, remove the upholstery, mattresses, clothing, and rugs.

14.3 Recommissioning



DO NOT OPERATE THE BOAT UNLESS IT IS COMPLETELY ASSEMBLED. KEEP ALL FASTENERS TIGHT. KEEP ADJUSTMENTS ACCORDING TO SPECIFICATIONS.

Note: It is important and recommended that the fitting out procedure for the marine gear be done by a qualified service person. Read the engine owner's manual for the recommended procedure.



BEFORE LAUNCHING THE BOAT, MAKE SURE THE DRAIN PLUG IS INSTALLED.

Reactivating The Boat After Storage


- Charge and Install the batteries
- Install the drain plugs in the hull and engine bracket
- Check the engines for damage and follow the manufacturer's instructions for recommissioning
- Perform all routine maintenance
- Check all hose clamps for tightness.


- Pump the antifreeze from the fresh water system and flush several times with fresh water.
- Check and lubricate the steering system.
- Clean and wash the boat.
- Install all upholstery, cushions and canvas

After Launching


- Carefully check all water systems and the engine bracket for leaks. Operate each system one at a time checking for leaks and proper operation.
- Check the bilge pump manual and automatic switches.
- Prime the fuel system and start the engines. When the engines start, check the cooling system port below the engine cowling for a strong stream of water. This insures that the cooling pump is operating. Carefully monitor the gauges and check for leakage and abnormal noises. Operate the boat at slow speeds until the engine temperature stabilizes and all systems are operating normally.

Chapter 15: WIRING DIAGRAMS

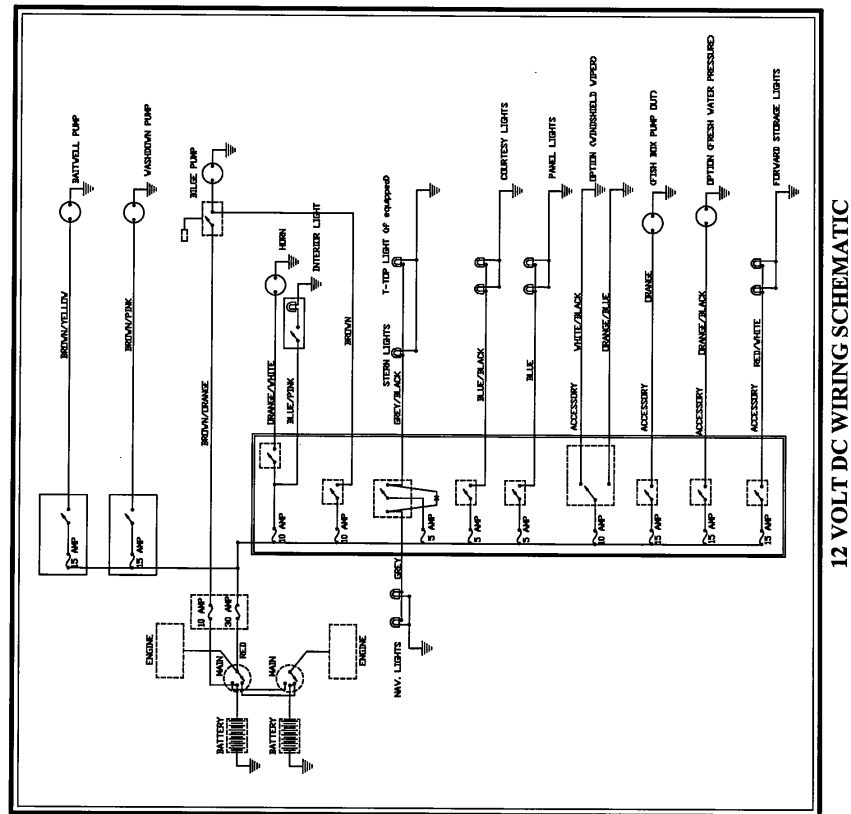


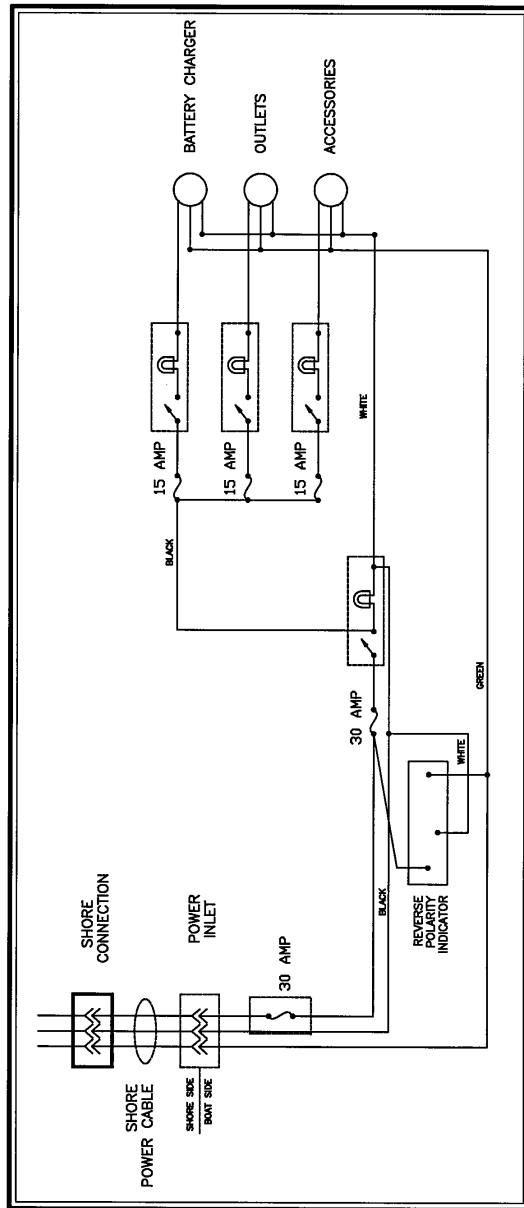


110 VOLT WIRING SCHEMATIC

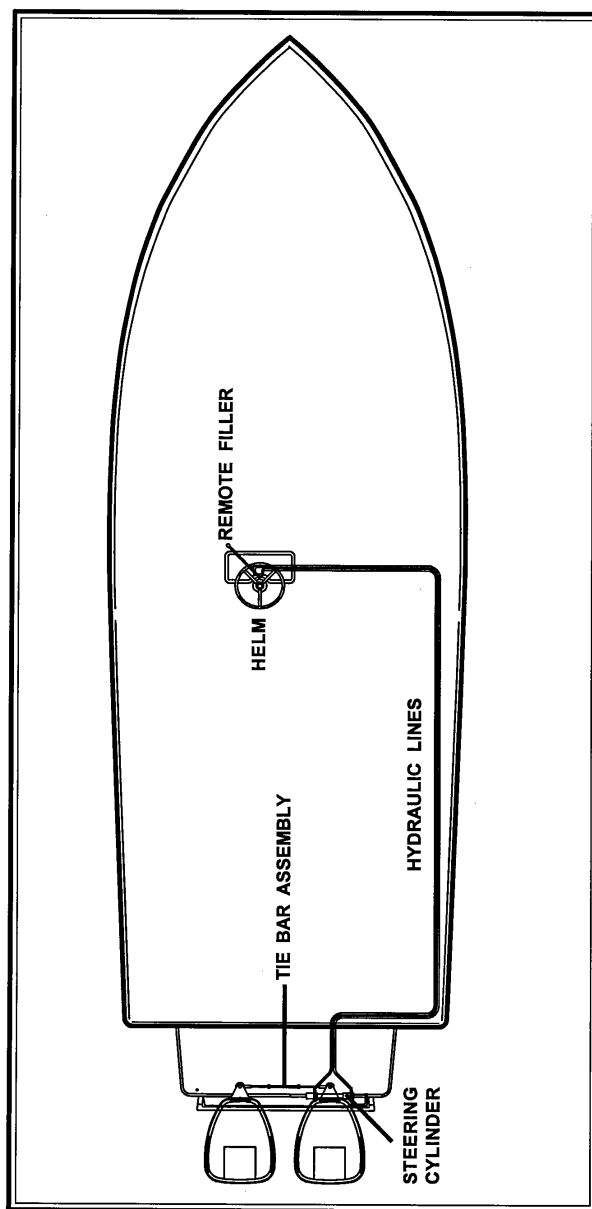


HYDRAULIC STEERING SCHEMATIC

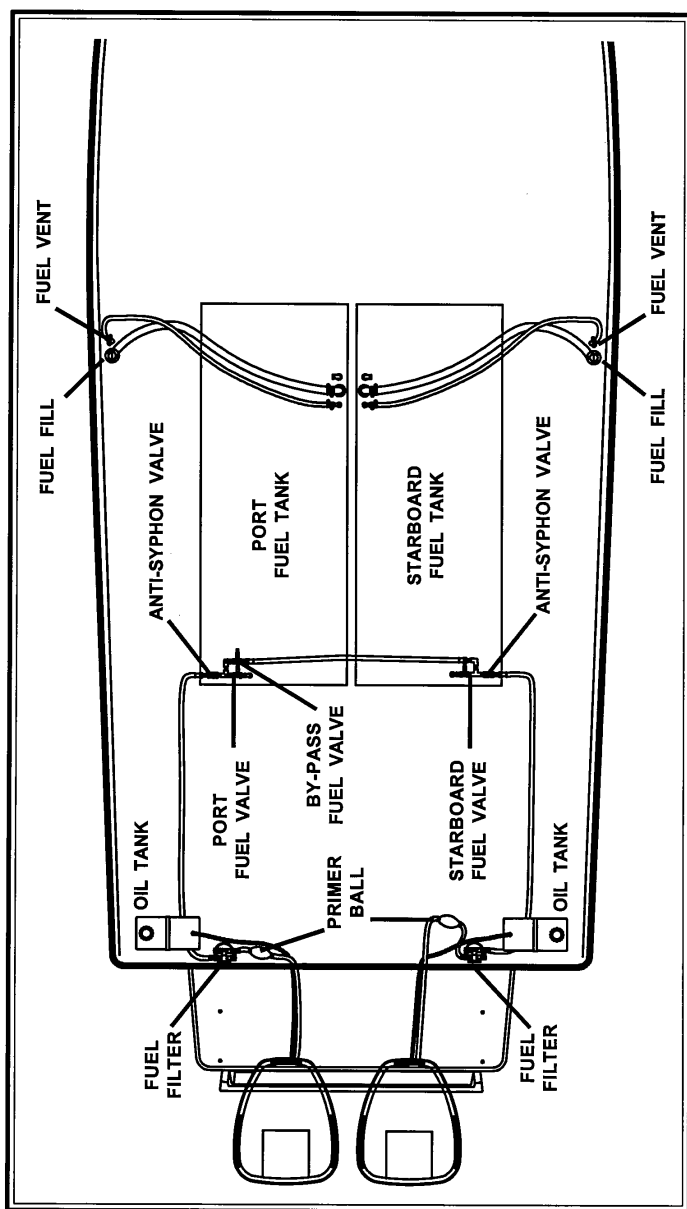


FUEL SYSTEM SCHEMATIC

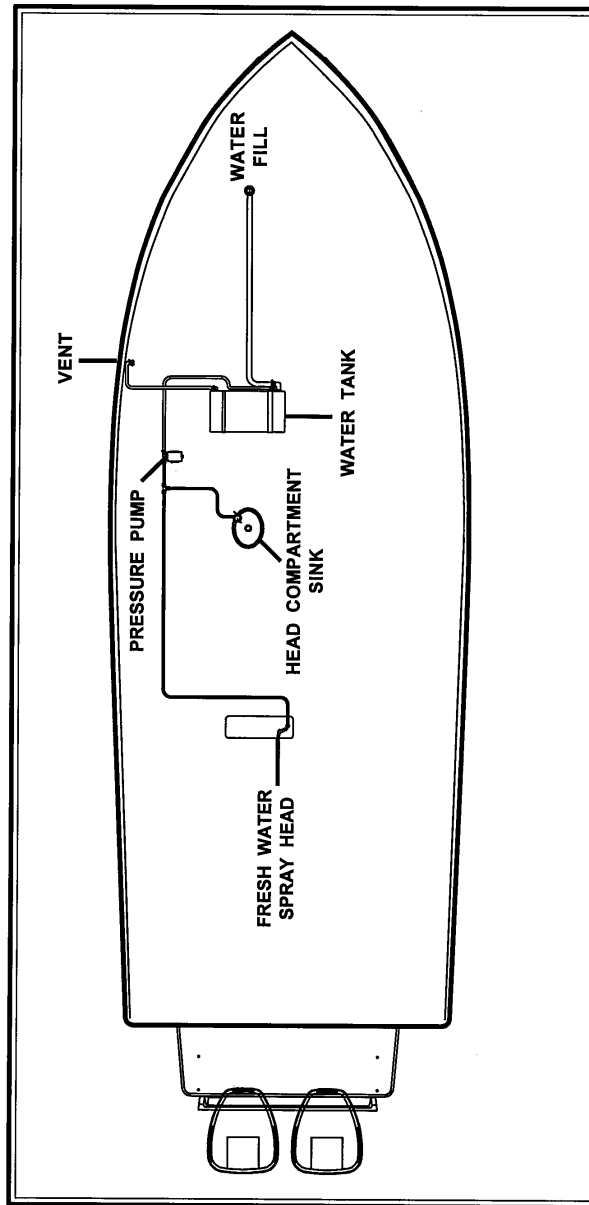

FRESH WATER SYSTEM SCHEMATIC

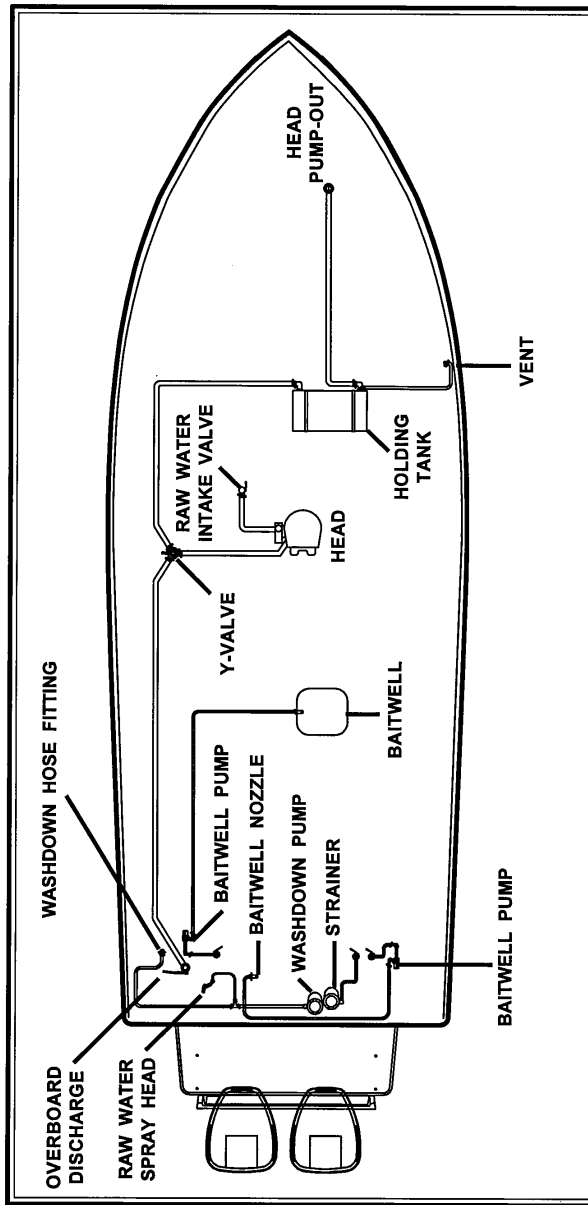

RAW WATER SYSTEM SCHEMATIC

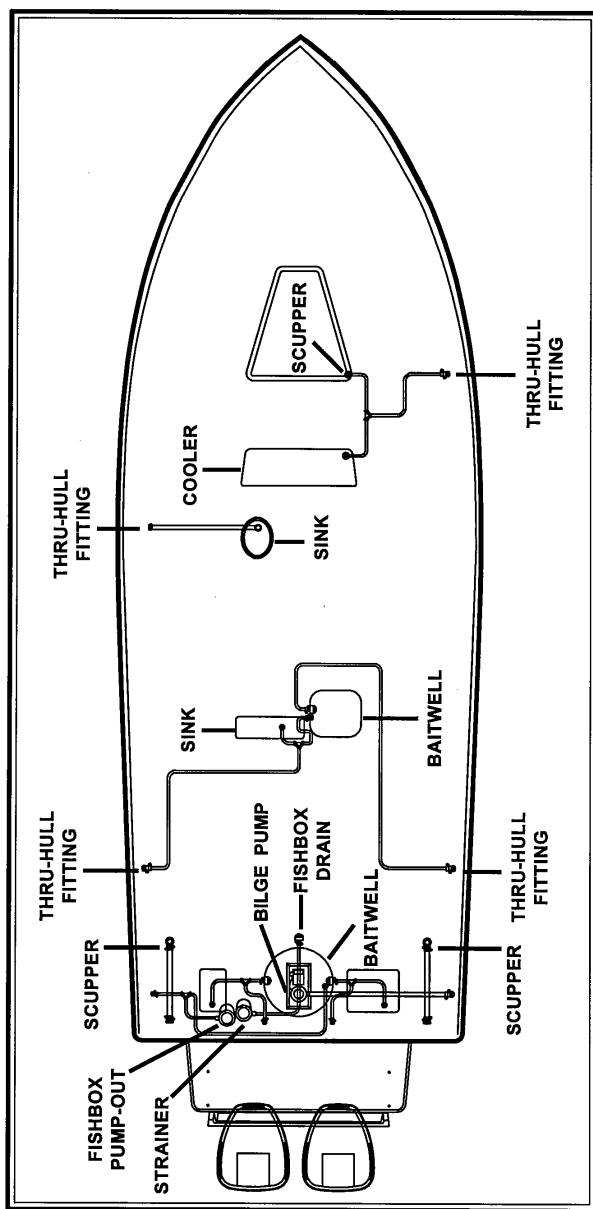

Chapter 16:

GLOSSARY OF TERMS

Aft:	In, near, or toward the stern of a boat
Aground:	A boat stuck on the bottom
Amidships:	In or toward the part of a boat midway between the bow and stern
Anchor:	A specially shaped heavy metal device designed to dig efficiently into the bottom under a body of water and hold a boat in place
Anchorage:	An area specifically designated by governmental authorities in which boats may anchor
Athwartships:	When an object lies on a line or in a plane at right angles to the centerline of a boat
Beam:	The breadth of a boat usually measured at its widest part
Beamy:	Boats of greater than normal beam
Bilge:	The lower interior areas of the hull of a boat
Bilge Pump:	Pumps water that collects in the bilge, overboard
Boarding Ladder:	Set of steps temporarily fitted over the side of a boat to assist persons coming aboard
Boat Hook:	Short shaft of wood or metal with a fitting at one end shaped to aid in extending one's effective reach from the side to a boat
Bow:	The front end of a boat
Bow Line:	A line that leads forward from the bow of the boat
Bow Rail:	Waist high rails of solid tubing to aid in preventing people from falling overboard
Bridge:	The area from which a boat is steered and its speed controlled